



Assembly Instructions **Appleton Gazebo**

Code: 20771

V3 05 24




(W x D x H) 2.22m x 2.22m x 2.40m



ONLINE ASSEMBLY VIDEO AVAILABLE

Please scan the QR code or visit zestoutdoorlivingsupport.co.uk

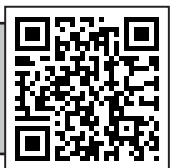

PLEASE KEEP THESE INSTRUCTIONS

Every Zest product is unique because each piece of timber has its own distinctive, natural features



Zest is a leading timber specialist, designing and manufacturing award winning wooden garden products, crafted from natural slow-grown European redwood. Unlike man-made materials, timber is an entirely natural material, and each piece has its own distinctive qualities. So, owning a Zest timber product is like enjoying a unique slice of nature.

The benefits of slow grown timber:

“Trees grow slowly in the cold climate of Eastern Europe producing stronger and close grained timber ideal for making quality outdoor products.”



Natural and Unique



There may be variations in the timber's colour or shading, but these will fade away over time when exposed to sunlight.



The changing seasons in each year of growth create characteristics unique to each tree - and to every piece of timber. Branches create an embedded mark in the tree trunk, resulting in a knot. Knots are a unique and natural feature which tells the story of the tree.



Owing to timber's natural moisture content, variations in temperature and humidity can cause expansion and contraction and may result in cracks and splits in any product made from natural timber. Any cracks and splits in the timber grain will alter with the changing seasons. They do not compromise the strength and durability of the product - they just add to its unique character.



Most Zest products are pressure treated which protects the timber from rot for many years. Pressure treatment can result in a small amount of 'green spotting' on the surface of new timber caused by natural salts leaving the wood. This will fade away over time.

These visible changes are not a fault or a cause for concern and do not affect the structural integrity of the product. They are a result of how the timber matures and responds to its natural environment.

Ethically Sourced

Zest's slow grown European redwood is sourced from responsibly managed PEFC certified forests. This means forests are used in a way that maintains biodiversity, regeneration, and nature conservation. PEFC tracks certified timber from the forest to the final product giving complete confidence to the customer. www.pefc.co.uk



Replanting

Zest with its main supply partners is dedicated to replanting woodland and is collaborating on the nurture of wildlife habitats.

Advisory Notices

- Roofs are weather resistant and not guaranteed to be watertight unless otherwise stated.
- Items with enclosed storage or cupboard space are weather resistant and are not watertight unless otherwise stated.
- Be aware of trap hazards if a Zest product has moving parts.
- All products should be positioned on solid, level ground
- Anchor down products where applicable using appropriate fixings.
- Roofs are not weight bearing
- Sanitise all catering surfaces prior to use.


Appleton Gazebo Assembly Instructions

Requires 2 Person assembly

Tools required: Corded / cordless drill, 3mm Drill bit, Pozi- drive bit / Screwdriver.
(*Crosshead) / Tape measure. (All screw holes to be pre-drilled)

Please take a few moments to check all pack contents listed



Appleton Gazebo Pack List			
Code	Item	Description	Quantity
21716	A	Post	4
21717	B	Back Panel	2
21718	C	Side Panel	2
21719	D	Bearer	2
21720	E1	Truss	2
21720	E2	Truss	2
21721	F	Upper Back Panel	1
21722	G	Bracing	8
21781	H	Square Edged Roof Board	4
21782	I	Roof Board	18
21725	J	Roof Batten	2
21783	K	Roof Capping	1
21727	L	Fascia	4
21728	M	Finial	2
21729	N	Hand Rails	2

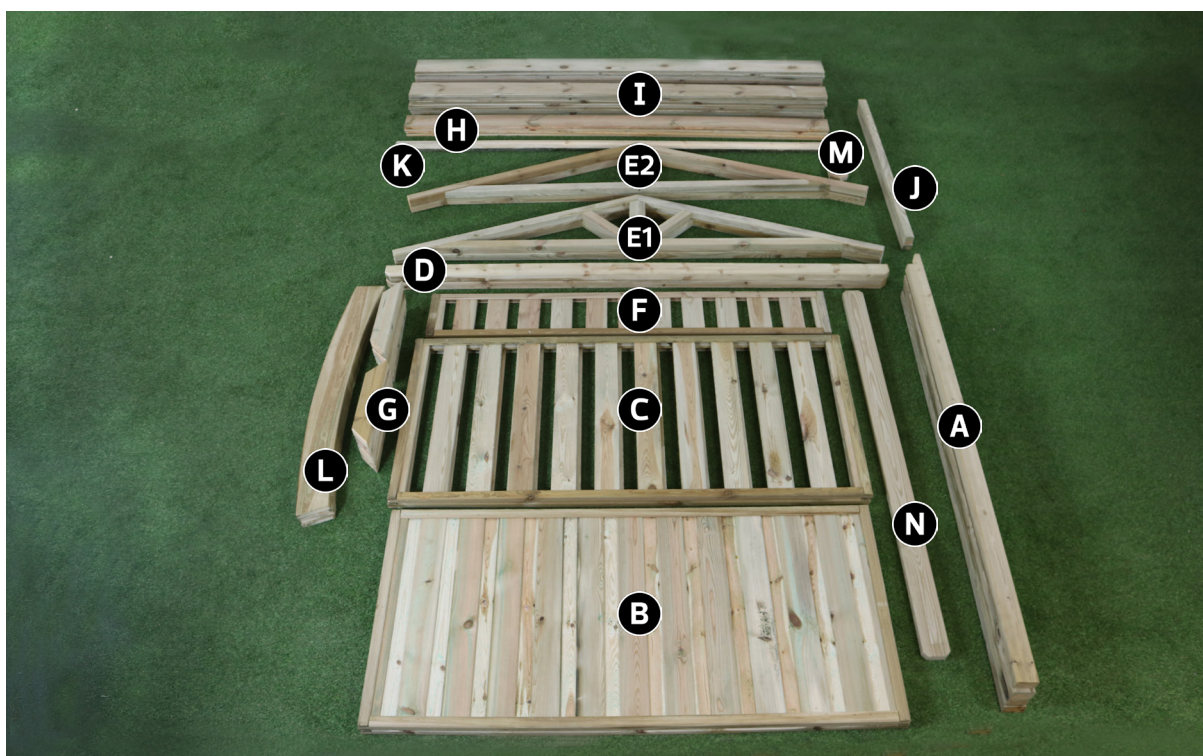

This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase


21785 - Appleton Gazebo Fixings List		
Item	Description	Quantity
1	120mm Screws	8
2	100mm Screws	12
3	80mm Screws	24
4	60mm Screws	8
5	45mm Screws	132

1

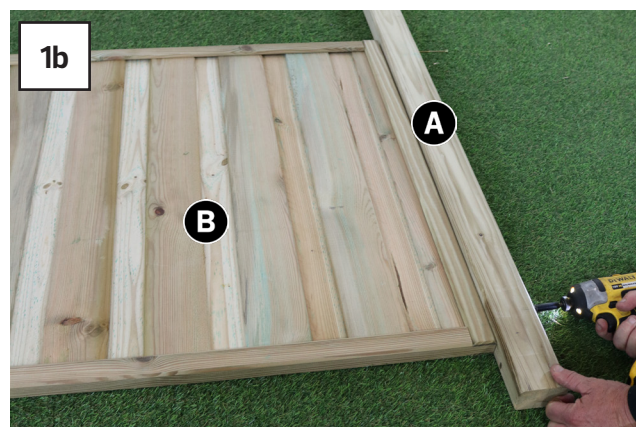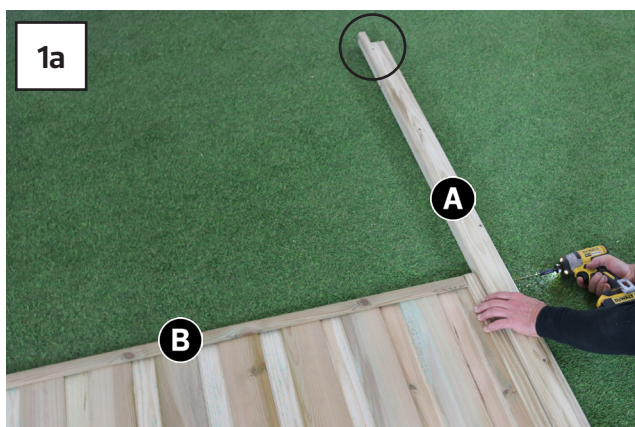





Place Back Panel (B) at a height of 90mm from base of Post (A), ensuring notch in Post (A) is facing outwards, fix in position using 2 x 100mm Screws.

2

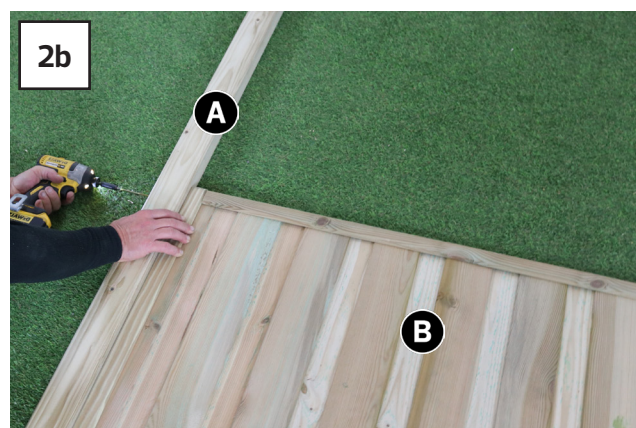



Similarly fix second Post (A) to other end of Back Panel (B) using 2 x 100mm Screws.

3

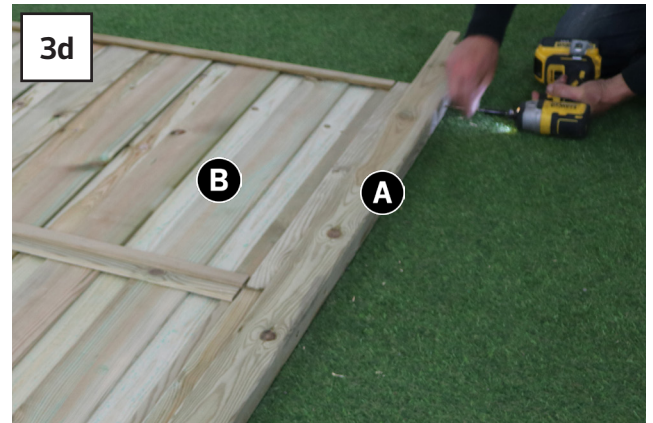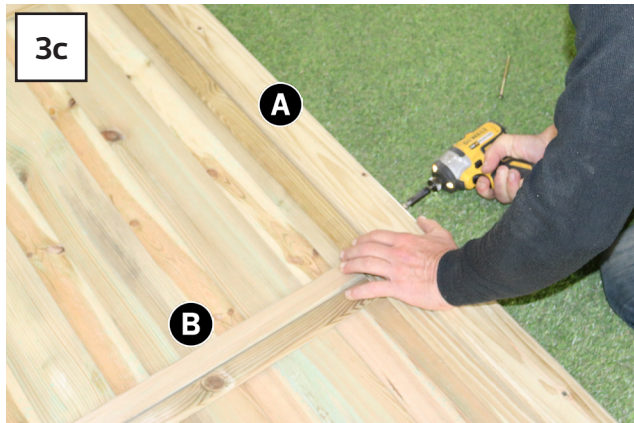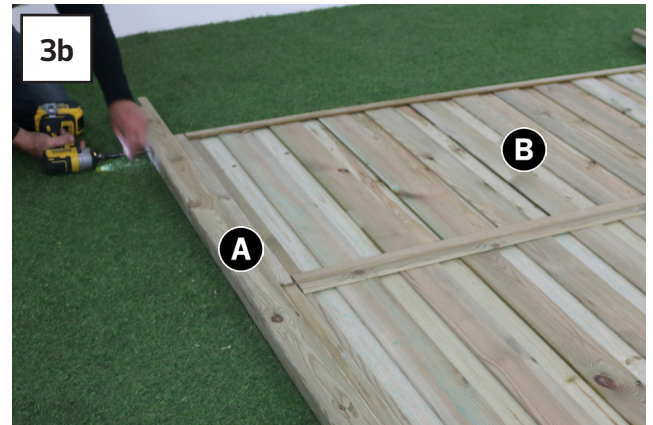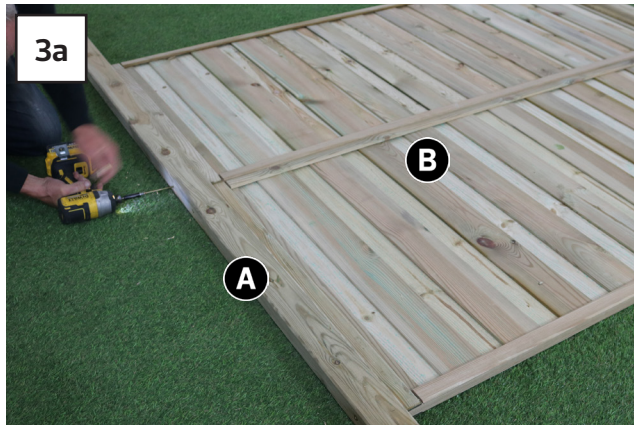



Place remaining Back Panel (B) between Posts (A) as shown above and fix in position using w4 x 100m Screws (2 x Screws per Post).

4

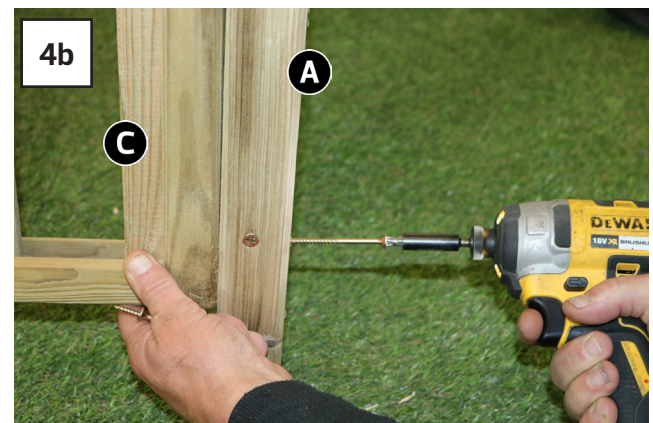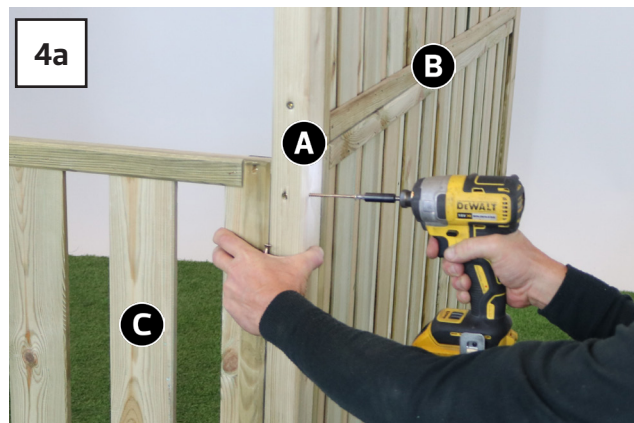


Attach 1 x Side Panel (C) to Post/Panel assembly, at a height of 90mm from base of Post (A), using 2 x 80mm Screws.

5

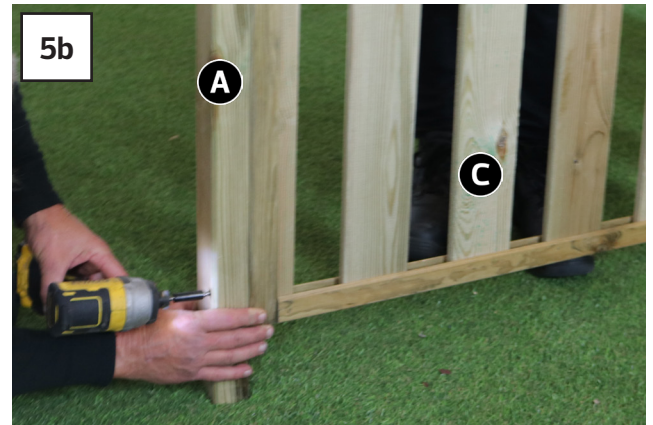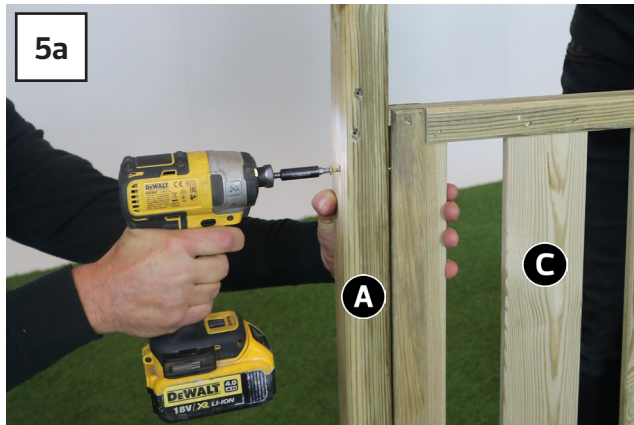

Attach Post (A) (Notch facing outwards) to Side Panel (C), at a height of 90mm from base of Post (A), using 2 x 80mm screws.

6

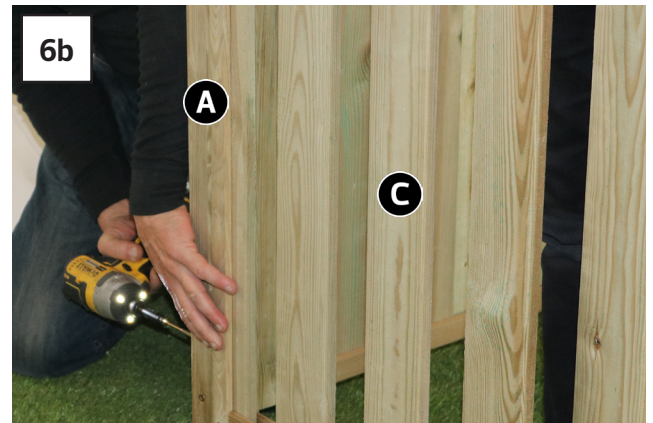

Attach remaining Side Panel (C) to other side of Post/Panel assembly, at a height of 90mm from base of Post (A), using 2 x 80mm Screws.

7




Fix remaining Posts (A) (Notch facing outwards) to Side Panels (C), at a height of 90mm from base of Post (A), using 2 x 80mm Screws.

8





Position 1 x Bearer (D) into notches in Posts (A). Allow a 30mm overhang beyond back of rear Post (A) and to Rear Post fix using 2 x 60mm Screws. Fix Bearer (D) to front Post (A) using 2 x 60mm Screws.
Repeat procedure for remaining Bearer (D) on other side of Post/Panel assembly.

9

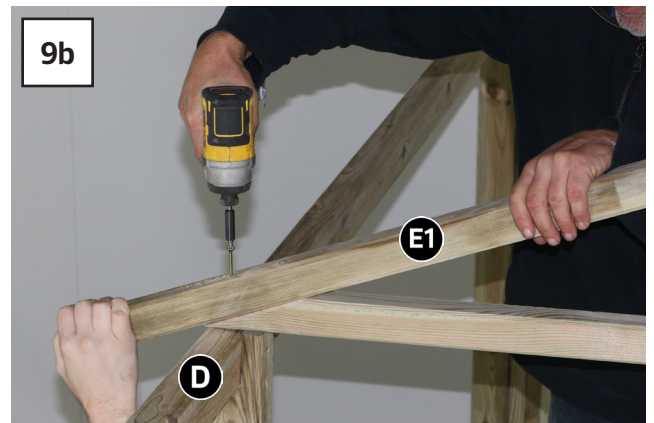



Place 1no. Truss (E1) directly above front Posts (A) and fix using 2 x 120mm Screws (1 x Screw per end)

10

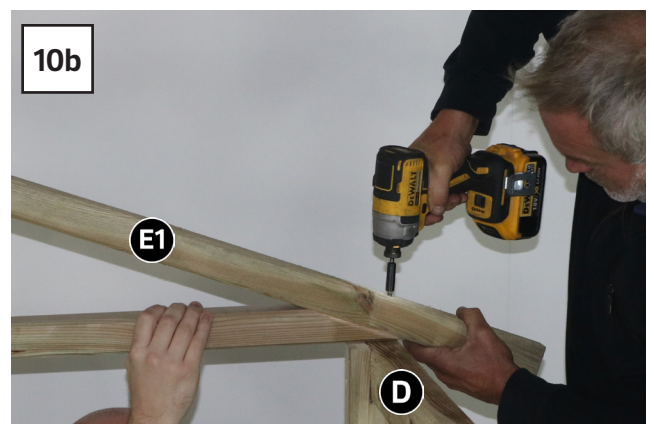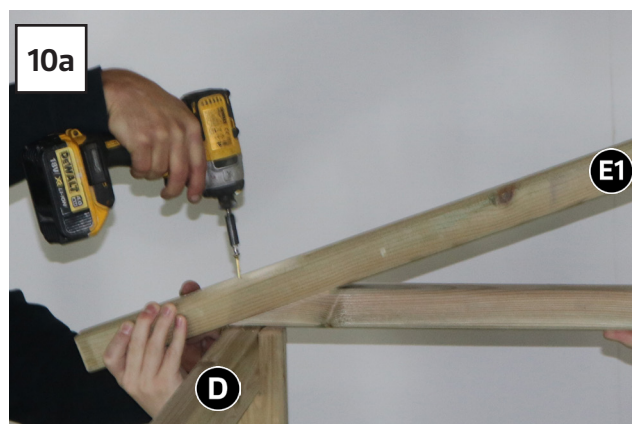

Place remaining Truss (E1) flush with end of Bearers (D) and fix using 2 x 120mm Screws (1 x Screw per end).



11

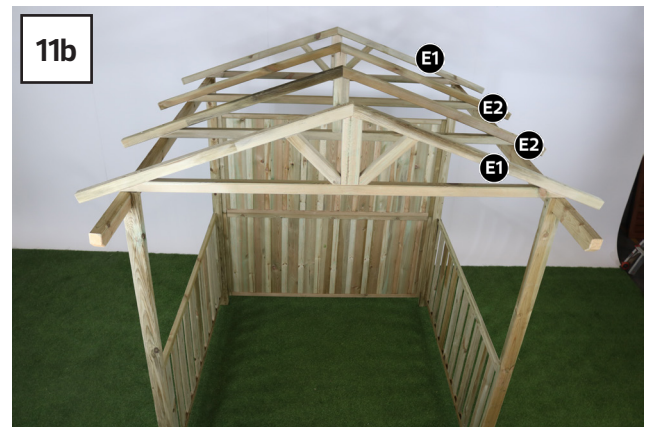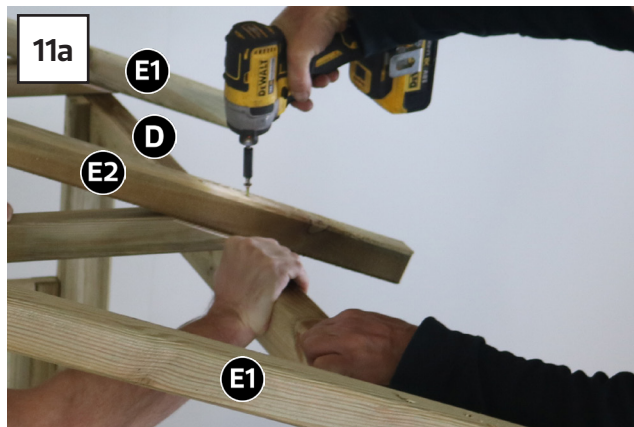

Equally space 2 x Trusses (E2) between Trusses (E1) and fix to Bearers (D) using 4 x 120mm Screws. (2 x Screws per Truss, 1 x Screw per end).


Note: Trusses must be fixed onto Bearer (D) ensuring equal overhang at both ends.

12

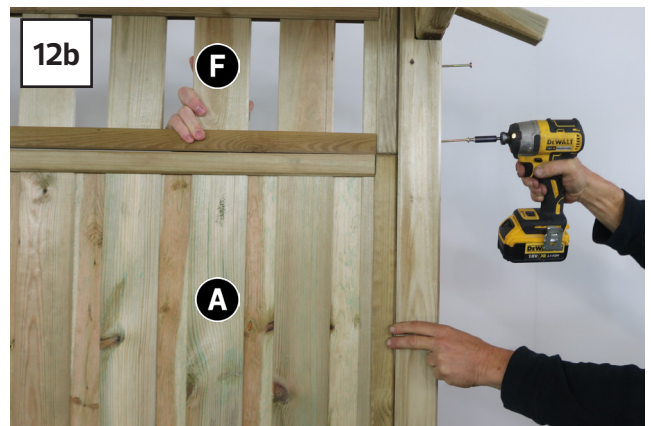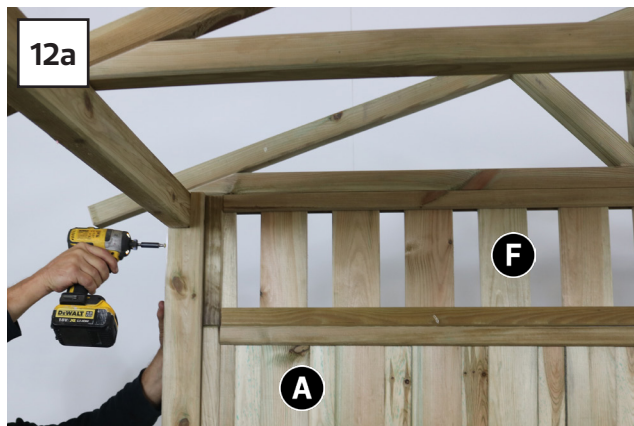



Locate Upper Back Panel (F) between rear Posts (A) and fix using 4 x 100m screws (2 x Screws per post).

13

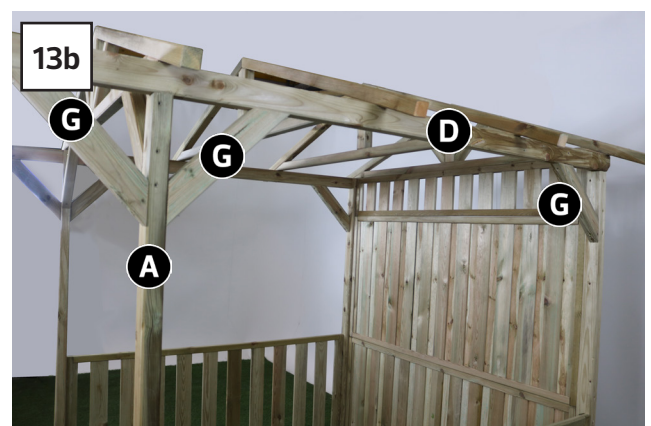



Ensure assembly is square and attach 8 x Bracings (G) (4 x Bracings per side) as shown, using 16 x 80mm Screws (2 x Screws per Bracing)

14

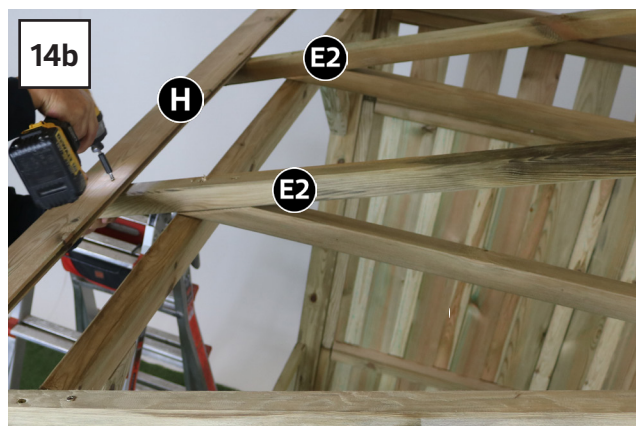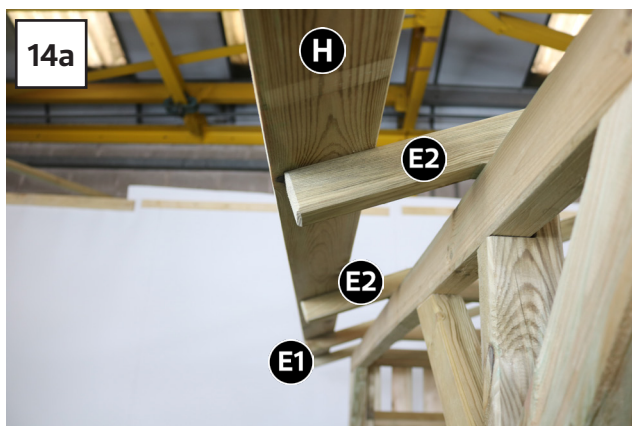

Place 1 x Square Edged Roof Board (H) (groove facing up) on to Trusses (E1 & E2). Allow a 10mm overlap at lower edge of trusses and fix to trusses using 4 x 45mm Screws

15

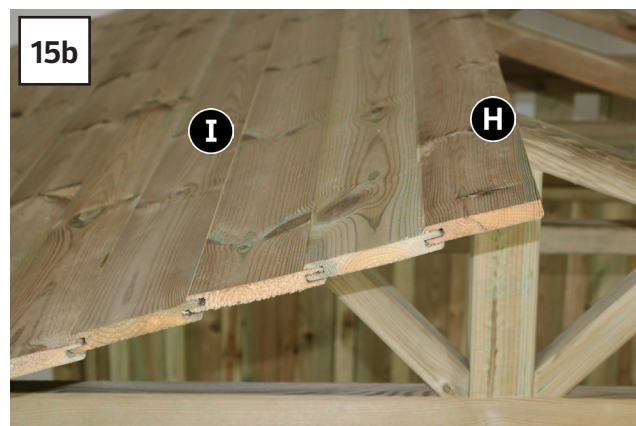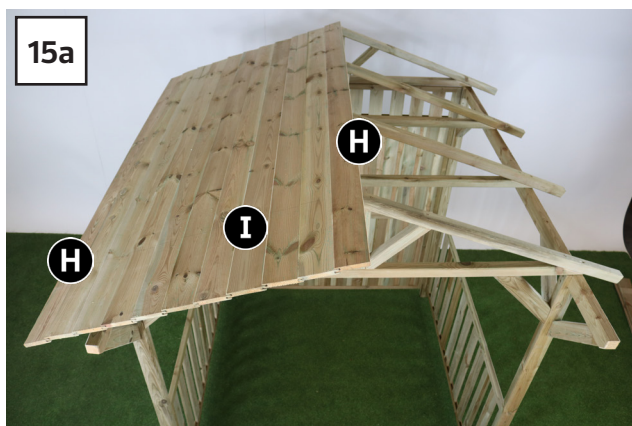


Interlock 9 x Roof Boards (I) and 1 x Square Edged Roof Board (H) and fix to Trusses E1 & E2 using 36 x 45mm Screws. (4 x Screws per board)

Repeat Stages 14 & 15 for remaining Square Edge Roof Board (H) and Roof Boards (I) on other side of assembly.

16



Position 1 x Roof Batten (J) beneath roof boards and fix using 4 x 45mm Screws.

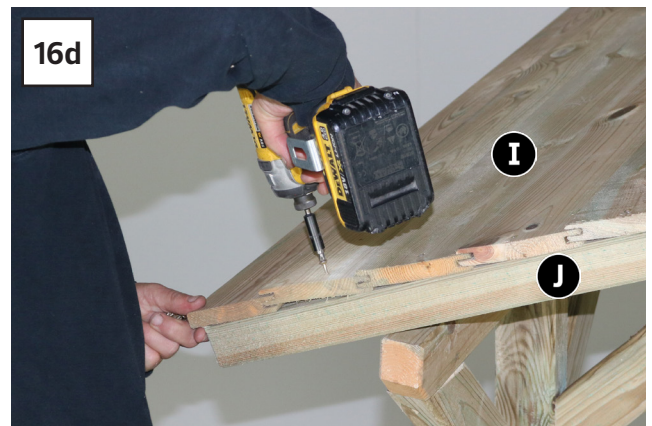

Place remaining Roof Batten (J) beneath roof boards and fix using 4 x 45mm Screws.

17




Position Roof Capping (K) at apex of roof and fix using 8 x 45mm Screws (4 x Screws per side).

18



Ensuring Roof Battens (J) and all board ends are covered, attach 2 x Fascia's (L) (Ensure correct orientation of Fascia) to Roof Battens (J) using 6 x 45mm Screws. (3 x Screws per Fascia (L)).

19

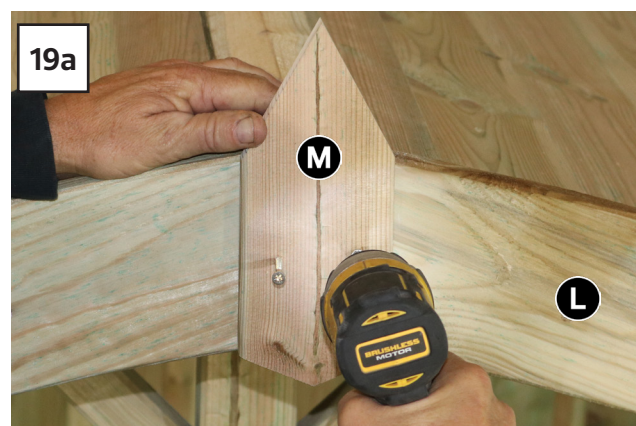

Attach Finial (M) to Fascia's (L) using 2 x 45mm Screws.
Repeat Stages 18 & 19 for remaining Fascia's (L) and Finial (M) at rear of assembly.

20



Place Handrail (N) onto Side Panel (C) and fix using 5 x 45mm Screws.
Repeat procedure for remaining Handrail (N) on other Side Panel (C).

21



Your Appleton Gazebo is now complete.