




Assembly Instructions **Stirling Arbour**

Code: 36094

V3 05 24

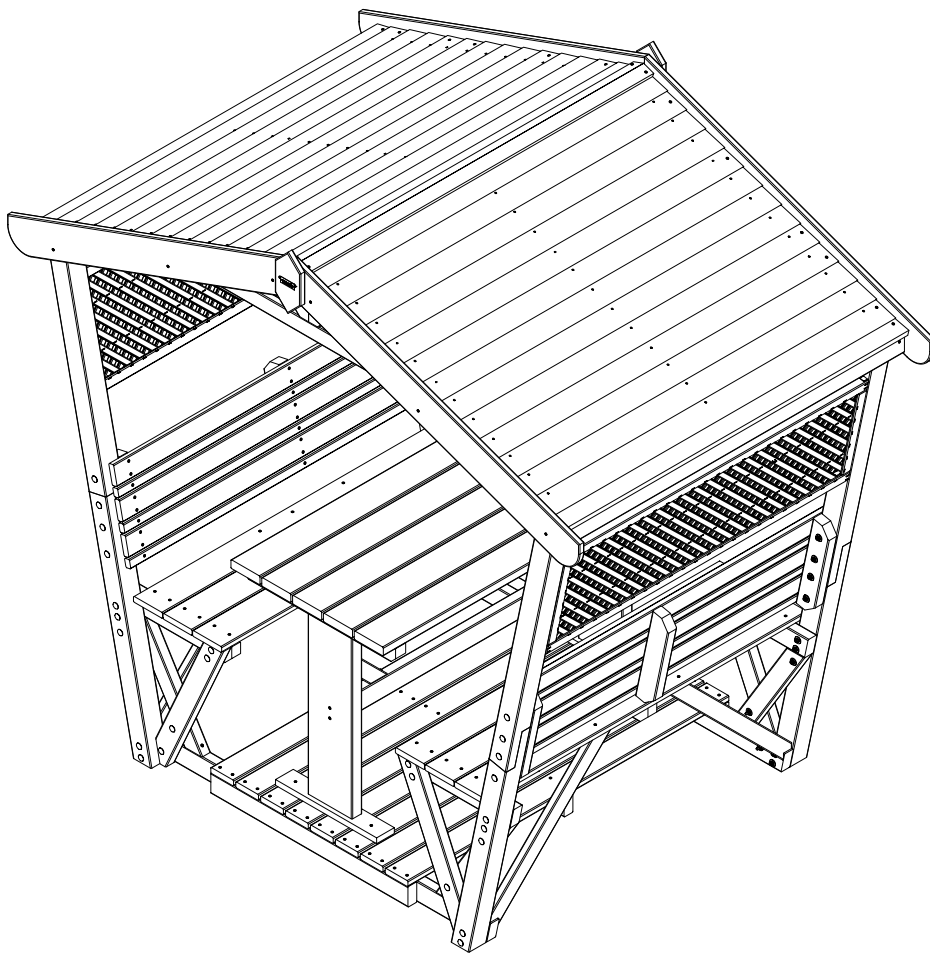

(W x D x H) 2.12m x 1.45m x 2.1m



ONLINE ASSEMBLY VIDEO AVAILABLE

Please scan the QR code or visit zestoutdoorliving.co.uk/assembly-search



PLEASE KEEP THESE INSTRUCTIONS

Every Zest product is unique because each piece of timber has its own distinctive, natural features



Zest is a leading timber specialist, designing and manufacturing award winning wooden garden products, crafted from natural slow-grown European redwood. Unlike man-made materials, timber is an entirely natural material, and each piece has its own distinctive qualities. So, owning a Zest timber product is like enjoying a unique slice of nature.

The benefits of slow grown timber:

“Trees grow slowly in the cold climate of Eastern Europe producing stronger and close grained timber ideal for making quality outdoor products.”



Natural and Unique



There may be variations in the timber's colour or shading, but these will fade away over time when exposed to sunlight.



The changing seasons in each year of growth create characteristics unique to each tree - and to every piece of timber. Branches create an embedded mark in the tree trunk, resulting in a knot. Knots are a unique and natural feature which tells the story of the tree.



Owing to timber's natural moisture content, variations in temperature and humidity can cause expansion and contraction and may result in cracks and splits in any product made from natural timber. Any cracks and splits in the timber grain will alter with the changing seasons. They do not compromise the strength and durability of the product - they just add to its unique character.



Most Zest products are pressure treated which protects the timber from rot for many years. Pressure treatment can result in a small amount of 'green spotting' on the surface of new timber caused by natural salts leaving the wood. This will fade away over time.

These visible changes are not a fault or a cause for concern and do not affect the structural integrity of the product. They are a result of how the timber matures and responds to its natural environment.

Ethically Sourced

Zest's slow grown European redwood is sourced from responsibly managed PEFC certified forests. This means forests are used in a way that maintains biodiversity, regeneration, and nature conservation. PEFC tracks certified timber from the forest to the final product giving complete confidence to the customer. www.pefc.co.uk



Replanting

Zest with its main supply partners is dedicated to replanting woodland and is collaborating on the nurture of wildlife habitats.

Advisory Notices

- Roofs are weather resistant and not guaranteed to be watertight unless otherwise stated.
- Items with enclosed storage or cupboard space are weather resistant and are not watertight unless otherwise stated.
- Be aware of trap hazards if a Zest product has moving parts.
- All products should be positioned on solid, level ground
- Anchor down products where applicable using appropriate fixings.
- Roofs are not weight bearing
- Sanitise all catering surfaces prior to use.

Stirling Arbour Assembly Instructions

Requires 2 Person assembly

Tools required: Spanner & Socket set, Corded / Cordless Drill, Pozi-drive Bit / Screwdriver,
3mm Drill Bit required in order for you to drill all screw holes before construction.

We advise the product is situated on firm level ground.





Please take a few moments to check all pack contents listed

Stirling Arbour Pack List			
Part Code	Item	Description	Quantity
38403	A	Post Brace	2
38404	B	Base Panel	1
38405	C	Post Bottom	4
38406	D	Seat	2
38407	E	Seat Leg	4
38408	F	Seat Brace	4
38409	G1	Post Top A	2
40140	G2	Post Top B	2
38410	H	Seat Back	2
38411	J	Trellis	2
38412	K1	Roof Brace Left	2
38432	K2	Roof Brace Right	2
38413	L	Horizontal Roof Brace	2
38414	M	Large Roof Panel	2
38415	N	Small Roof Panel	2
38416	P	Roof Cap	1
38417	Q	Fascia Board	4
38418	R	Finial	2
38419	S	Table Leg	2
38420	T	Table Top	1
38421	U	Table Brace	1
38422	V	Table Cross Brace	2
38423	W	Roof Cross Brace	4
38424	X	Roof Side Cap	2
38425	Y	Roof End Board	2
39543	Z	Under Seat Brace	4


This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase

Stirling Arbour Assembly Instructions

Code - 38426 Stirling Arbour Fixings List		
Item	Description	Quantity
1	M8 x 120mm Dome Head Bolt	36
2	M8 x 100mm Dome Head Bolt	4
3	M8 x 90mm Dome Head Bolt	24
4	M8 x 75mm Dome Head Bolt	8
5	M8 Washer	72
6	M8 Nut	72
7	M8 Spring Washer	72
8	M4 x 90mm Screw	14
9	M3 x 60mm Screw	60
10	M3 x 35mm Screw	16

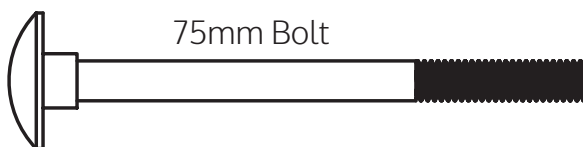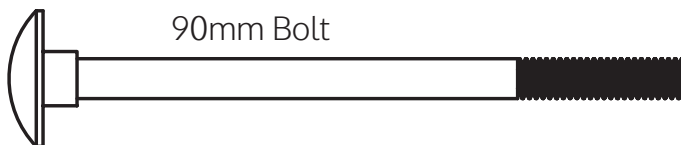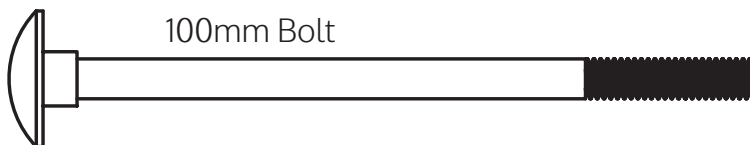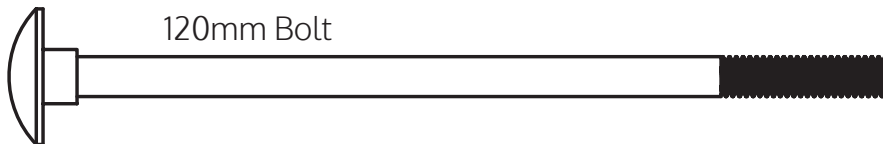

Washer

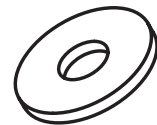

Spring Washer



Nut



90mm Screw




60mm Screw




35mm Screw

Stirling Arbour Assembly Instructions

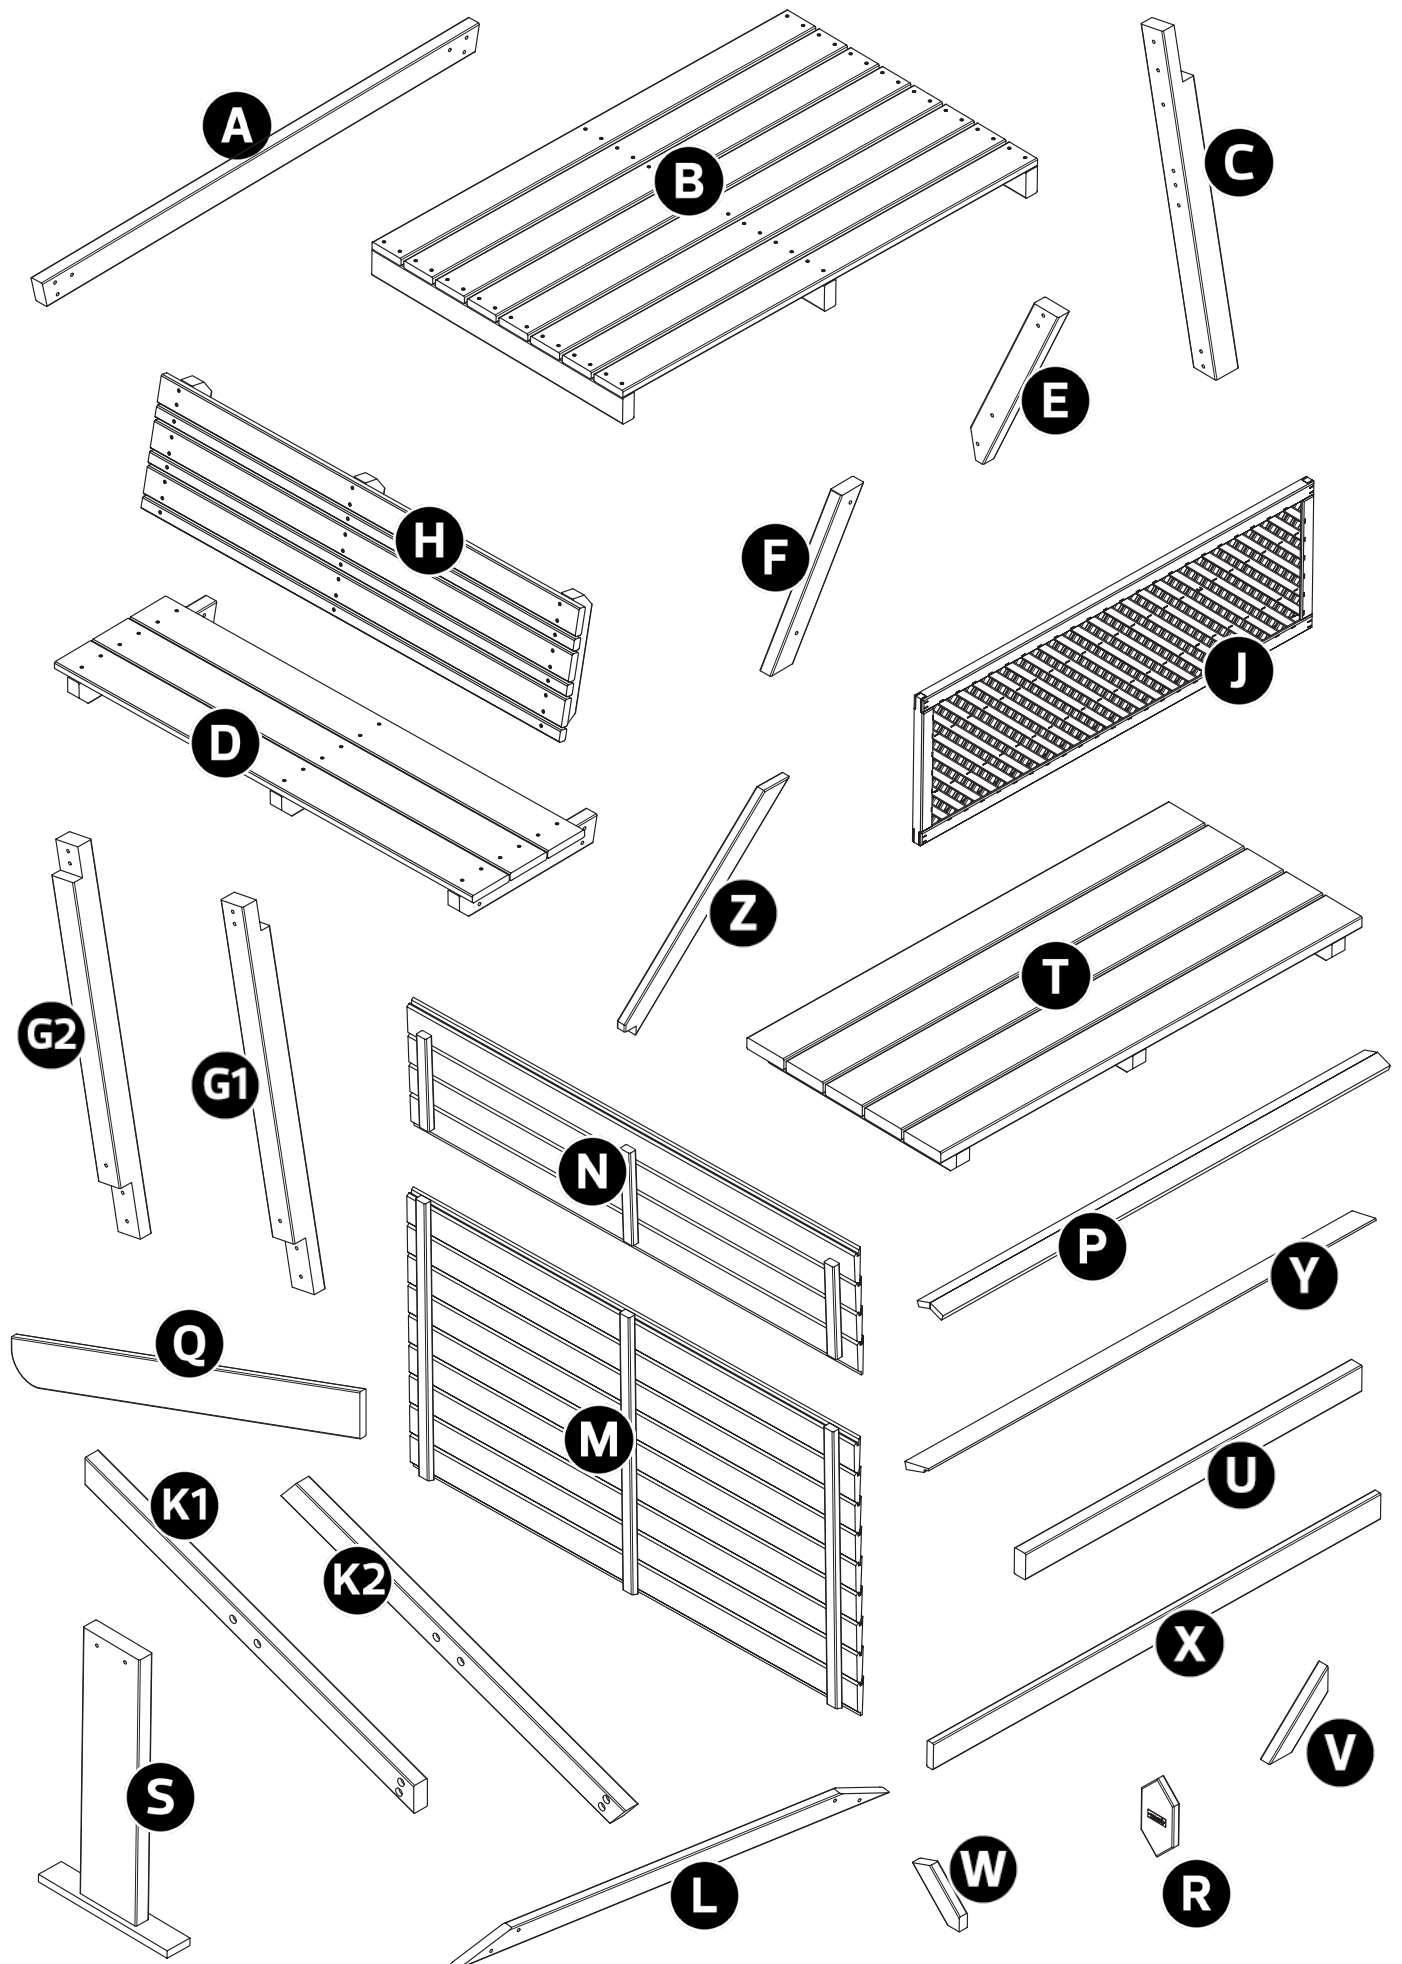


Nuts & Bolts: To allow ease of build, only tighten nuts & bolts by hand until the product is assembled. Once assembly is complete then tighten further with Spanner or Socket Set.

1

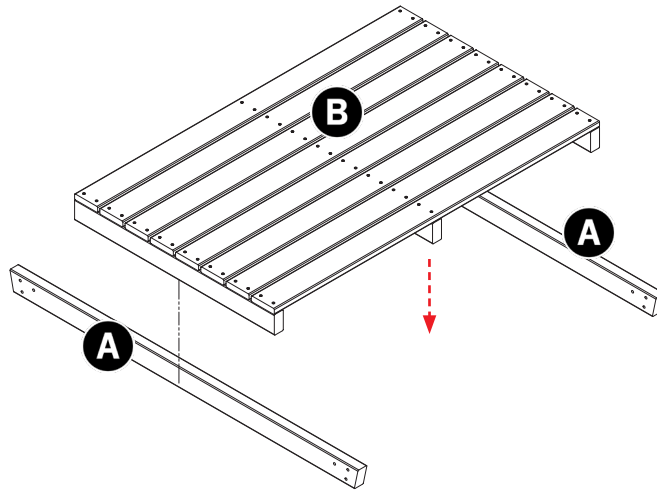



2

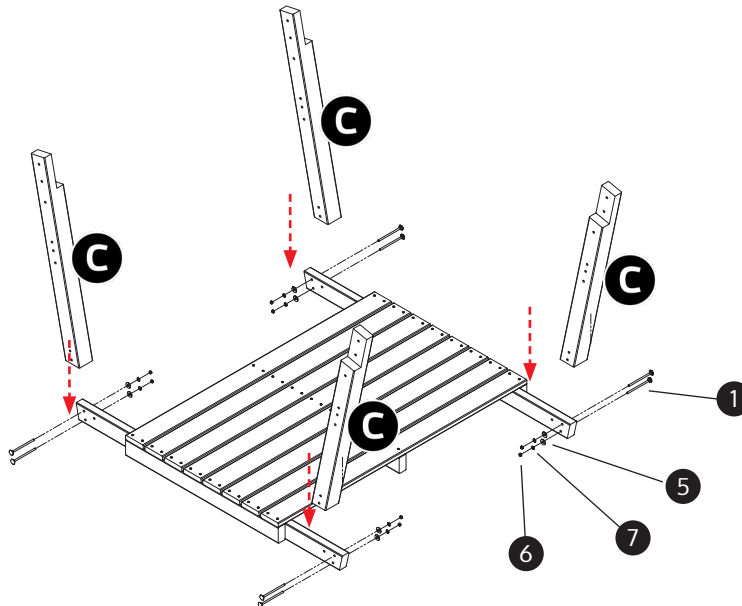


1	M8 x 120mm Bolt		x8
5	M8 Washer		x8
7	Spring Washer		x8
6	Nut		x8

3

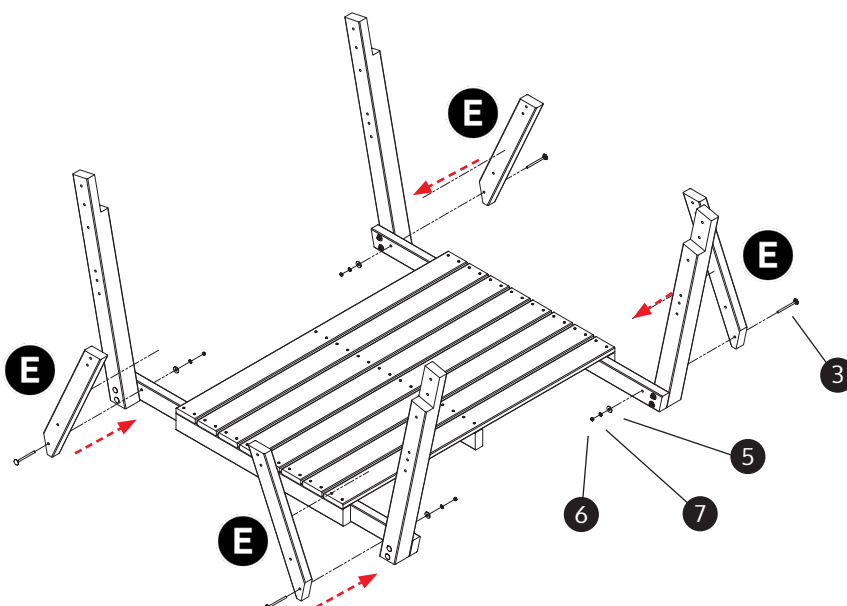


3	M8 x 90mm Bolt		x4
5	M8 Washer		x4
7	Spring Washer		x4
6	Nut		x4


4

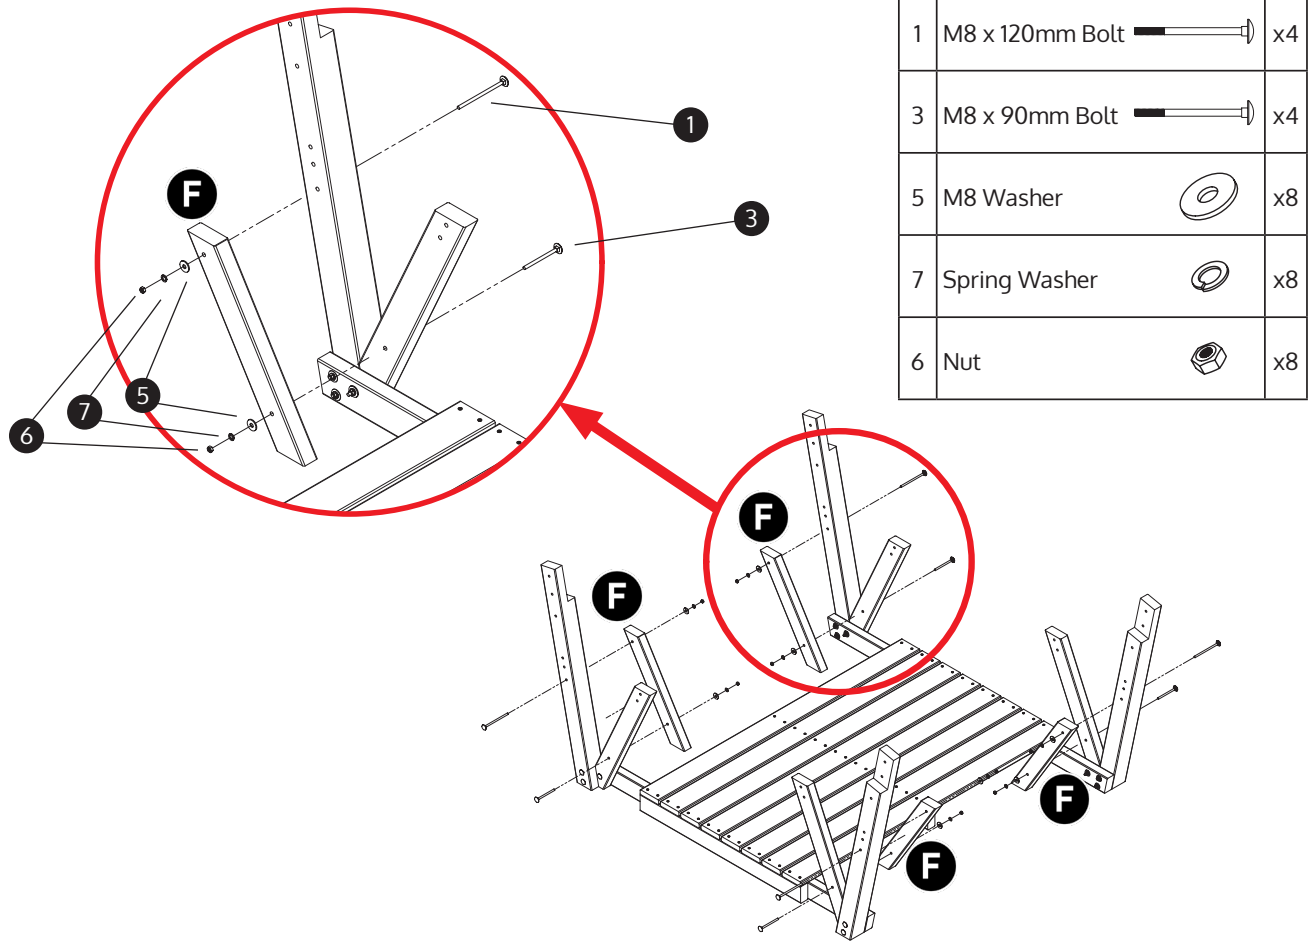


5

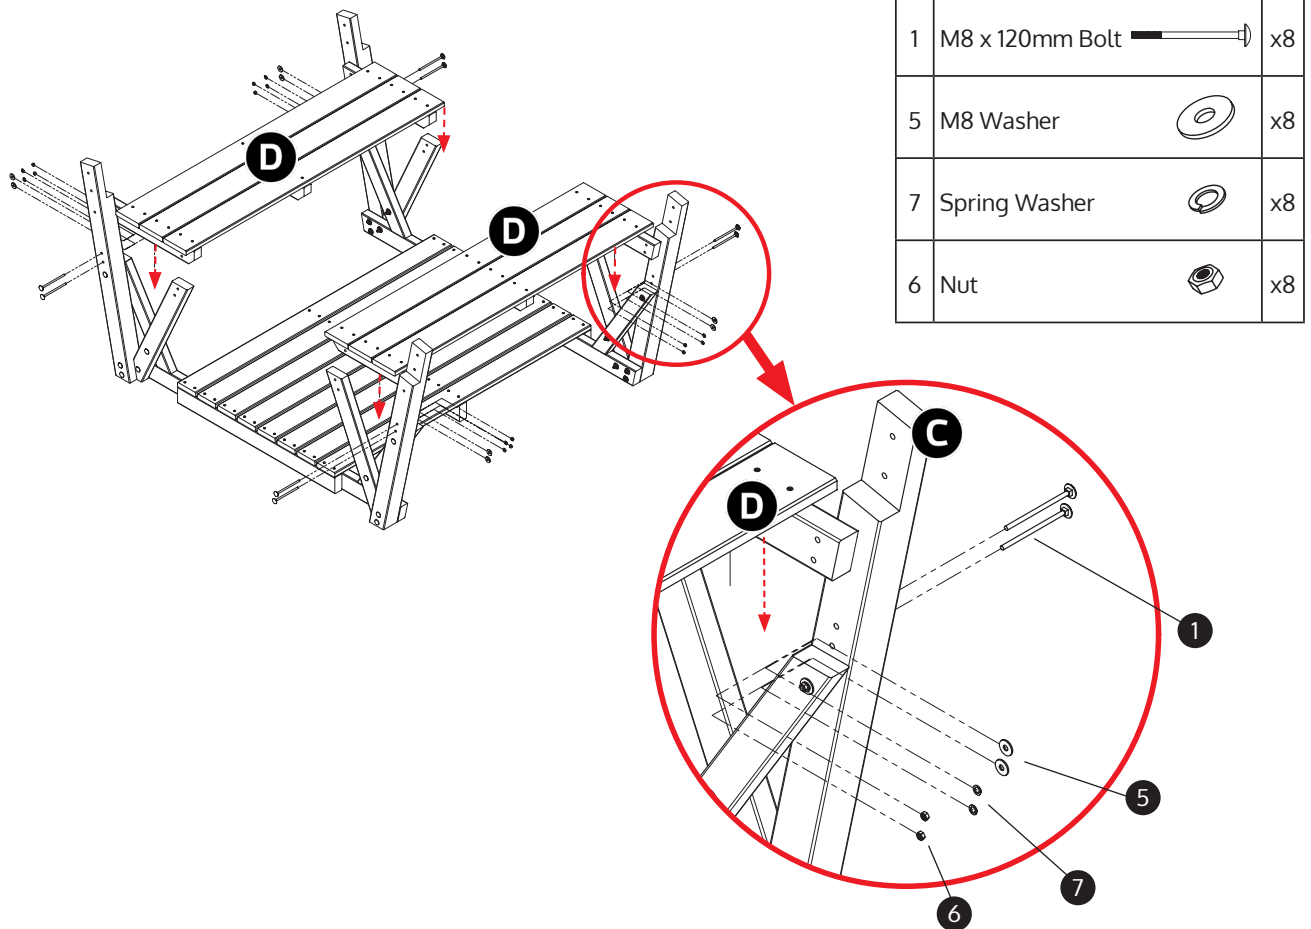


6

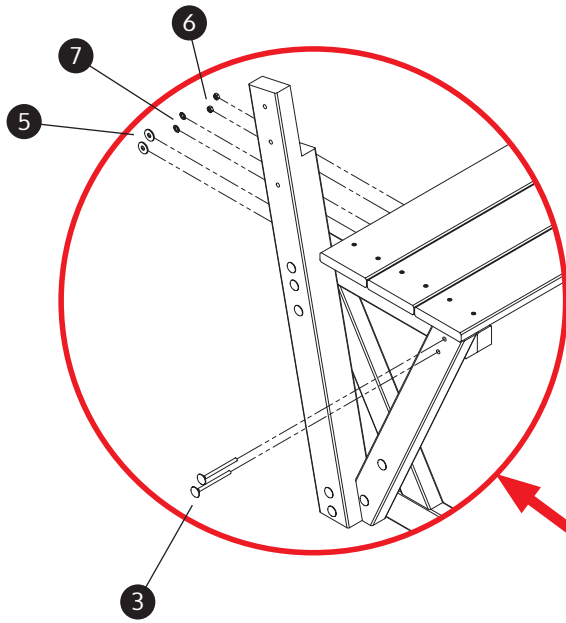


3	M8 x 90mm Bolt		x8
5	M8 Washer		x8
7	Spring Washer		x8
6	Nut		x8

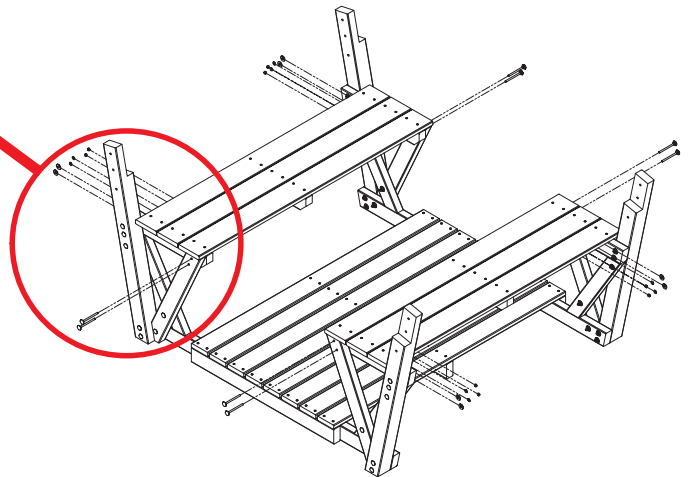


7

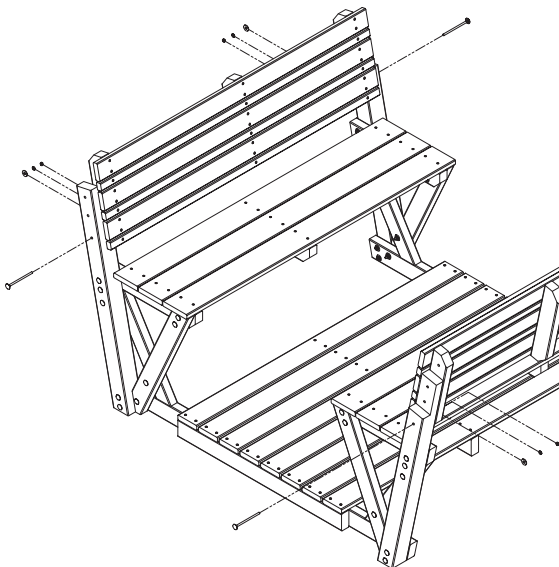


1	M8 x 120mm Bolt		x4
5	M8 Washer		x4
7	Spring Washer		x4
6	Nut		x4

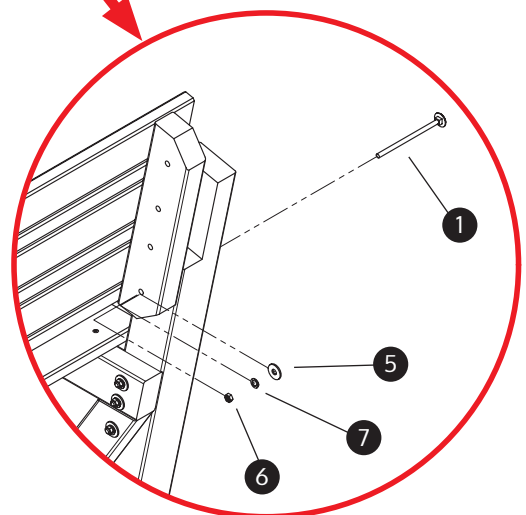


8

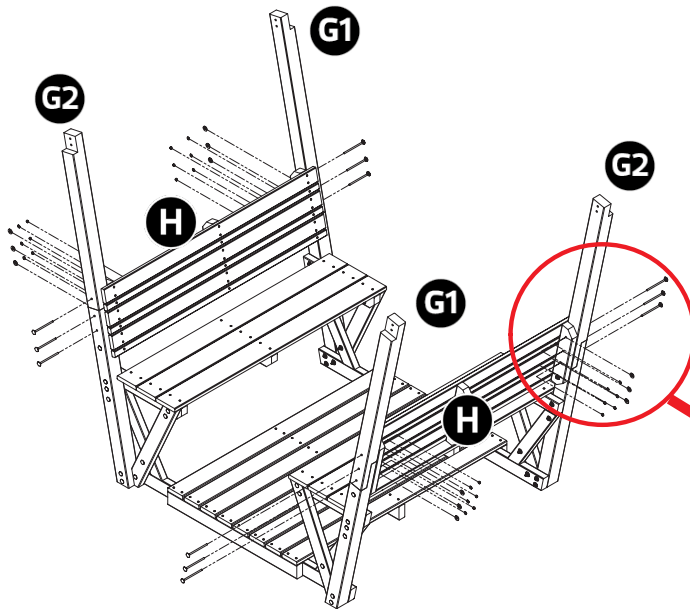

1	M8 x 120mm Bolt		x12
5	M8 Washer		x12
7	Spring Washer		x12
6	Nut		x12

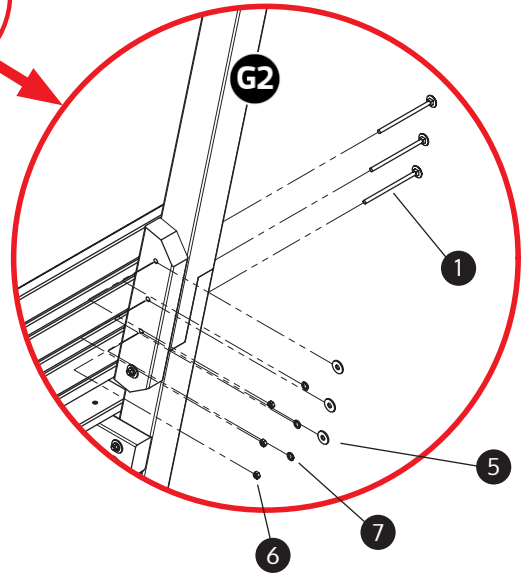


9

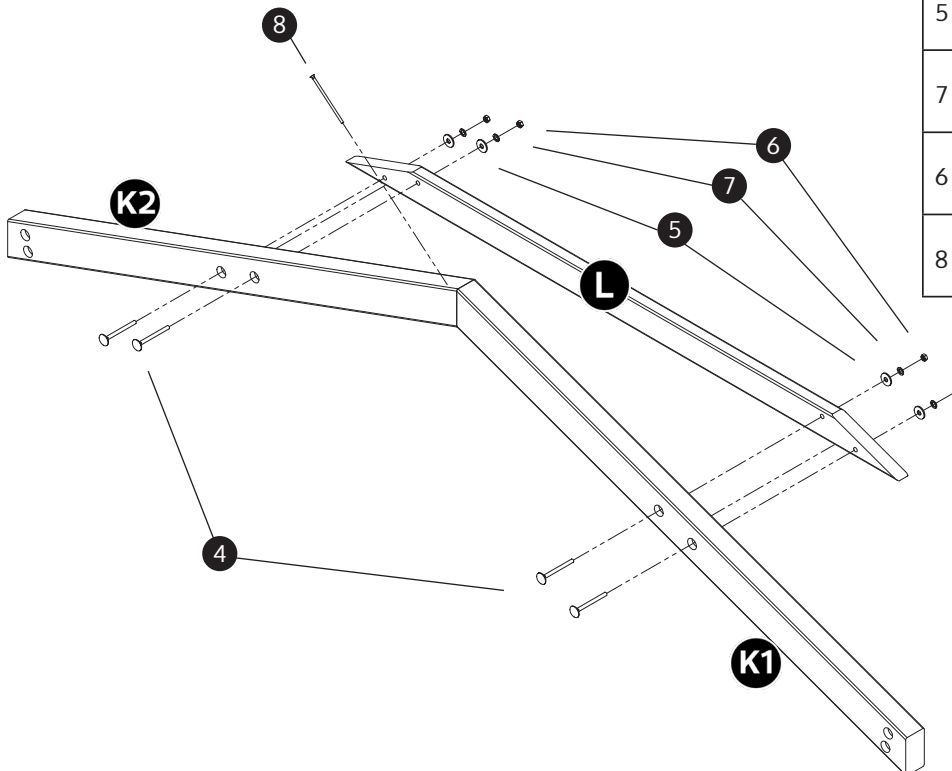

4	M8 x 75mm Bolt		x8
5	M8 Washer		x8
7	Spring Washer		x8
6	Nut		x8
8	90mm Screw		x2


Repeat assembly for remaining roof braces (K1, K2 & L).

10

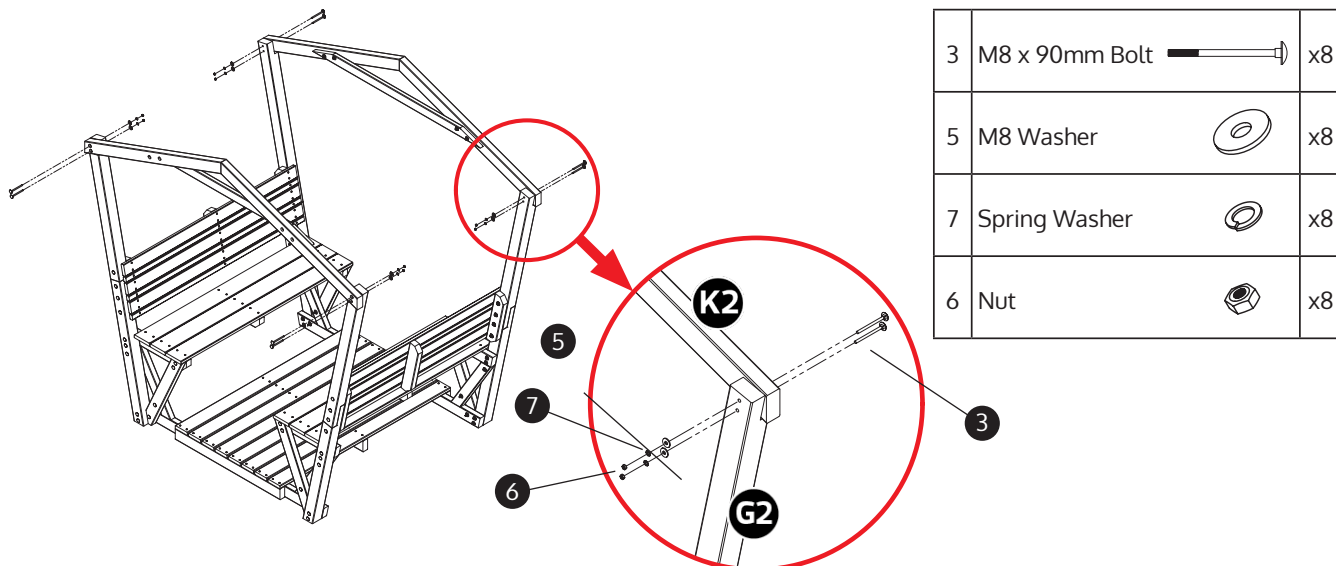


Fully tighten all previous bolts at this stage.


11

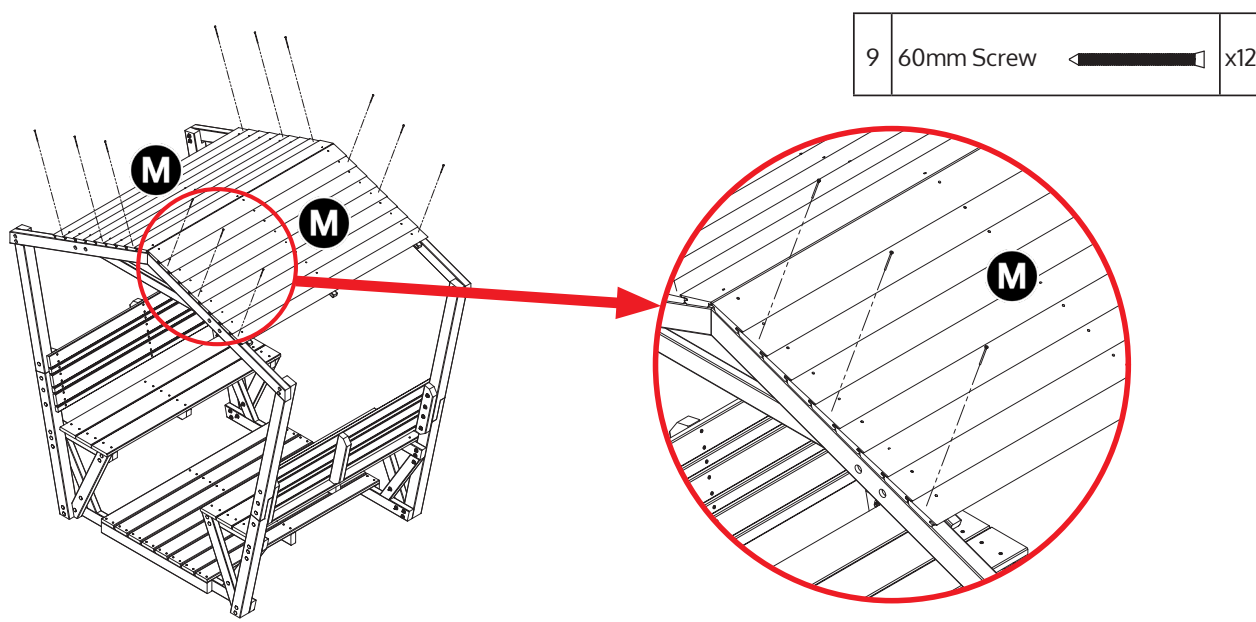


12

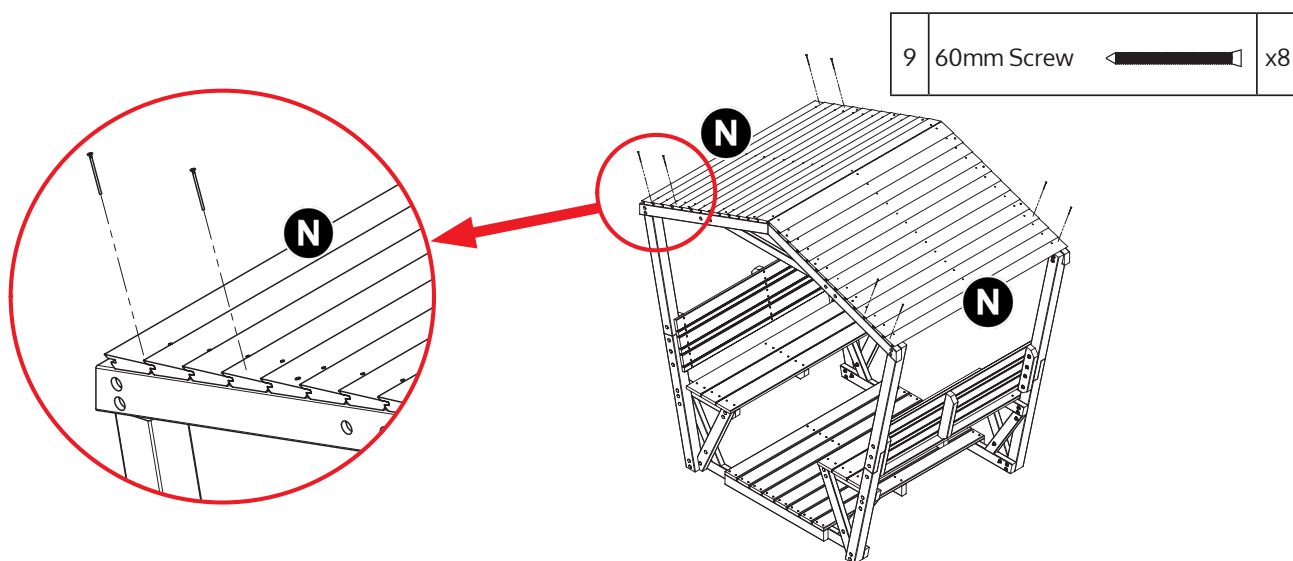


Slide small roof panel (N) into large roof panel (M).

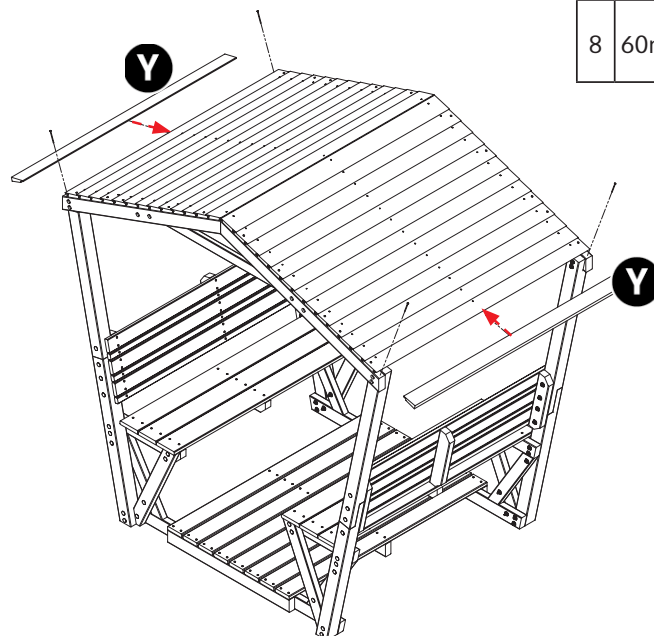

Slide roof end boards (Y) into small roof panels (N).

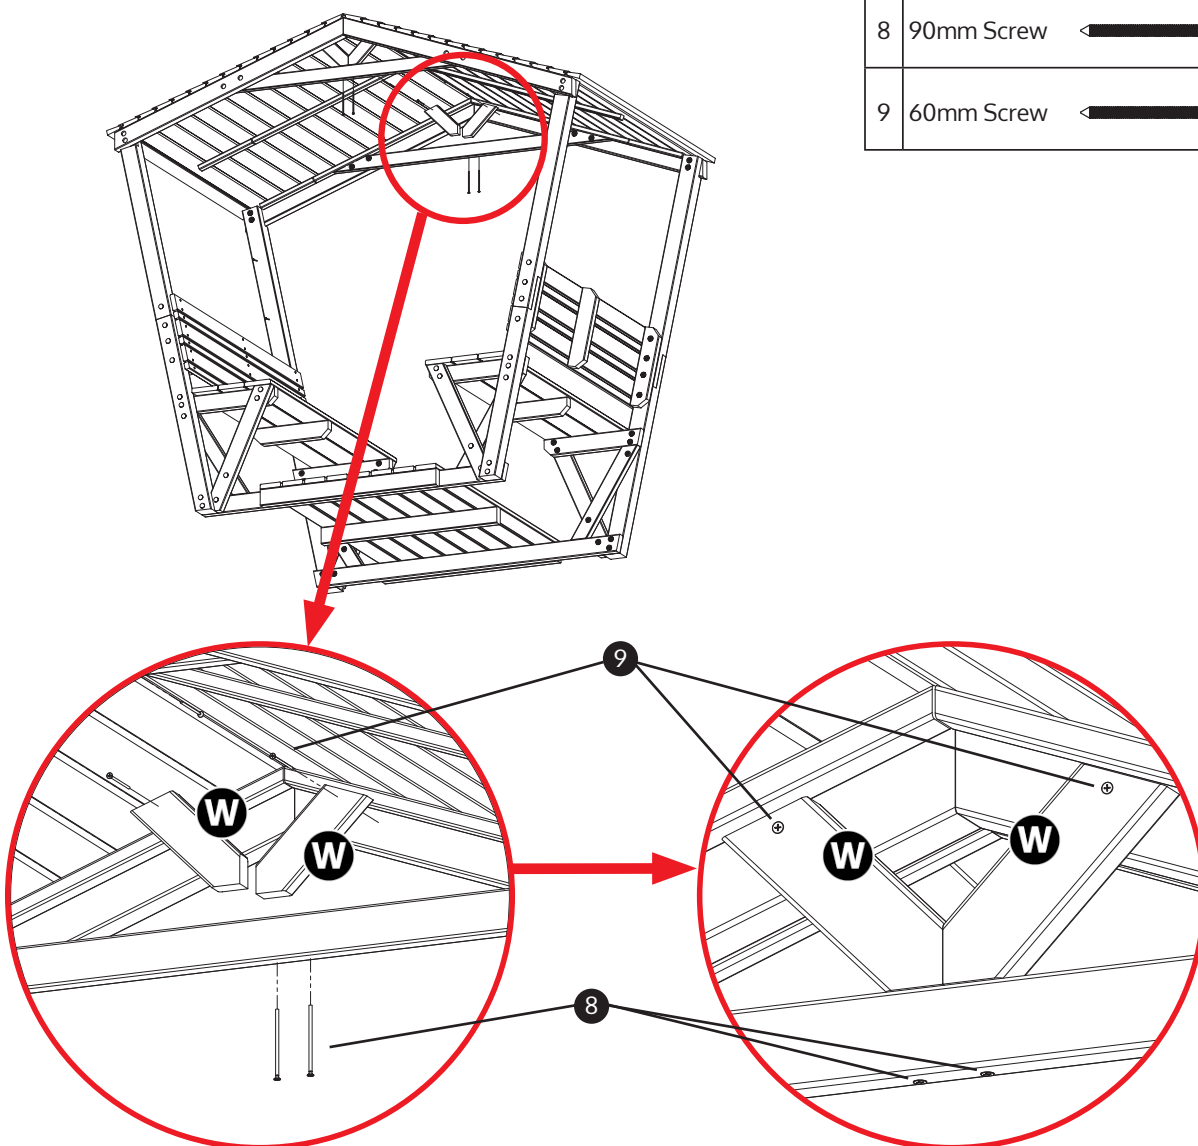

15

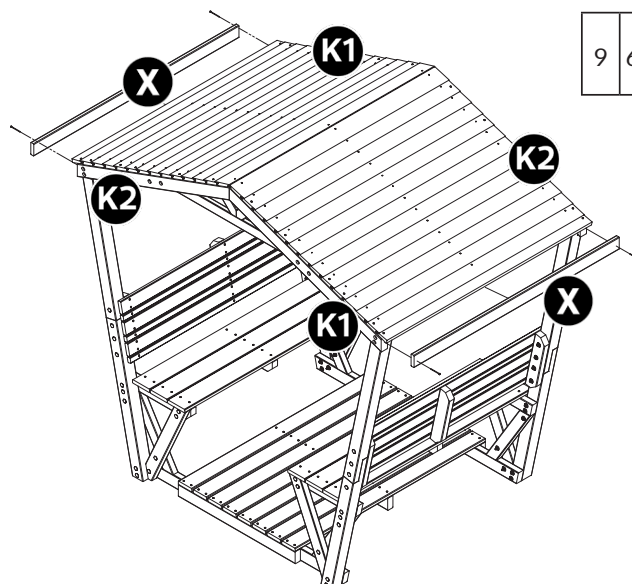

9


60mm Screw



x4

Secure Roof Side Cap (X) into end of panels (K1 & K2).

16

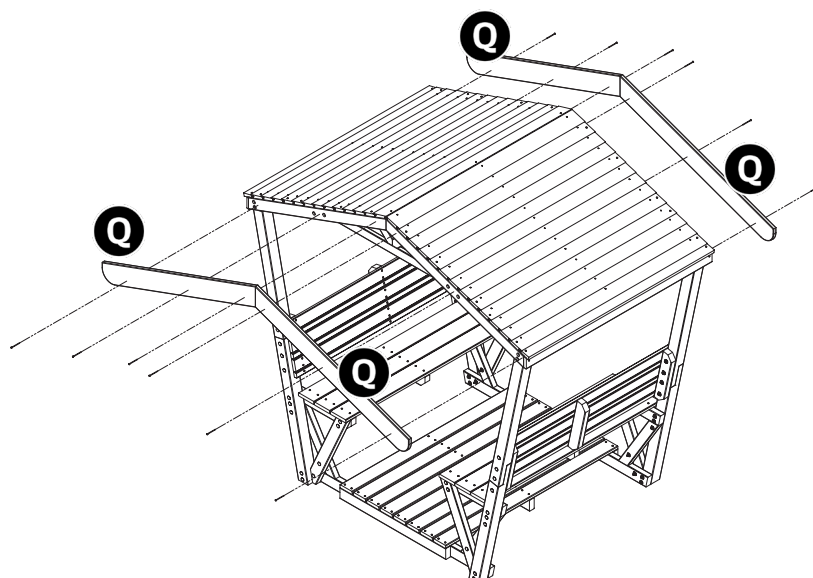

9


60mm Screw



x12

Fix Fascias (Q) using 3 x 60mm screws per panel - take care not to screw into the bolts.

17

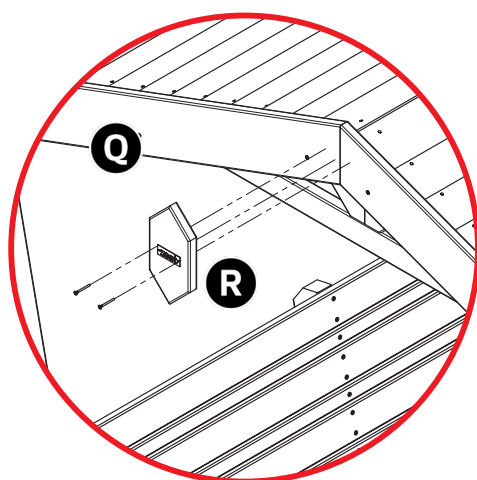


10


35mm Screw




x4

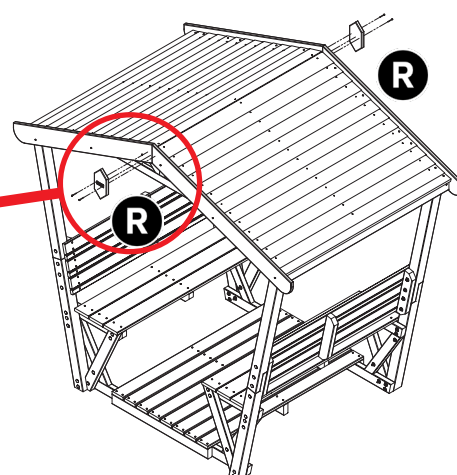

18

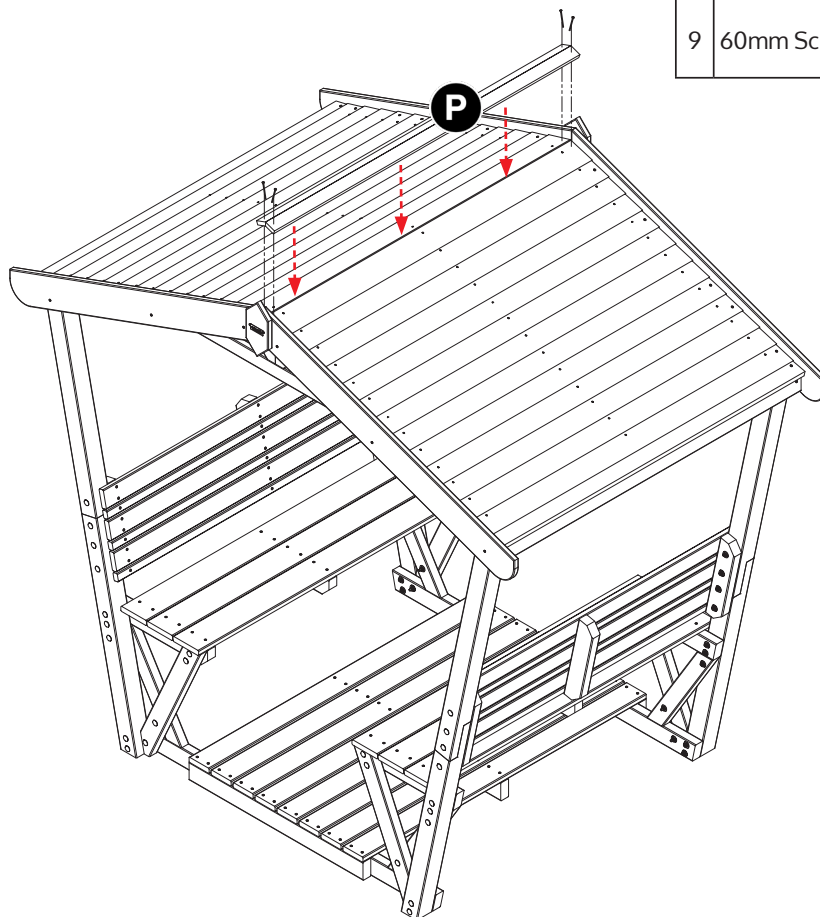


19

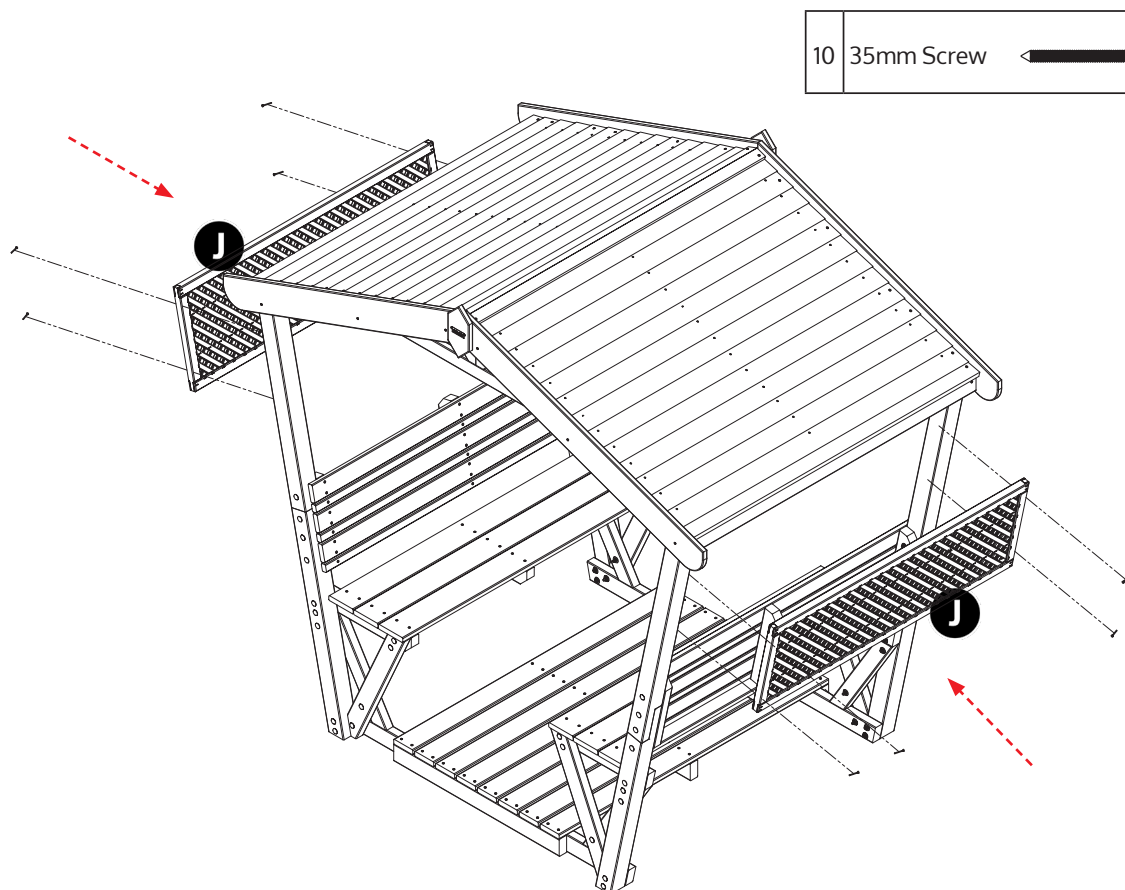


Screw through the inside of the trellis frames (J) into posts (G1 & G2).

9	60mm Screw		x8
---	------------	---	----

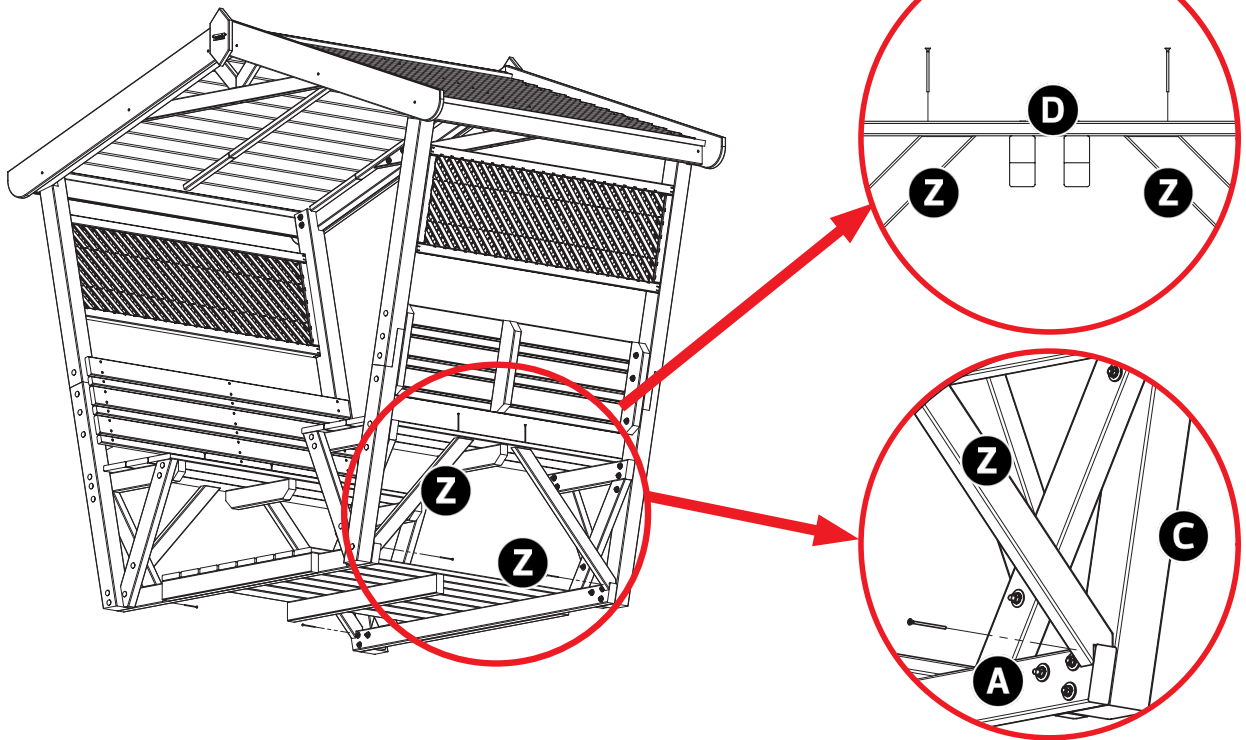


Fix Under Seat Brace (Z) under both seat assemblies.

8	90mm Screw		x4
---	------------	---	----

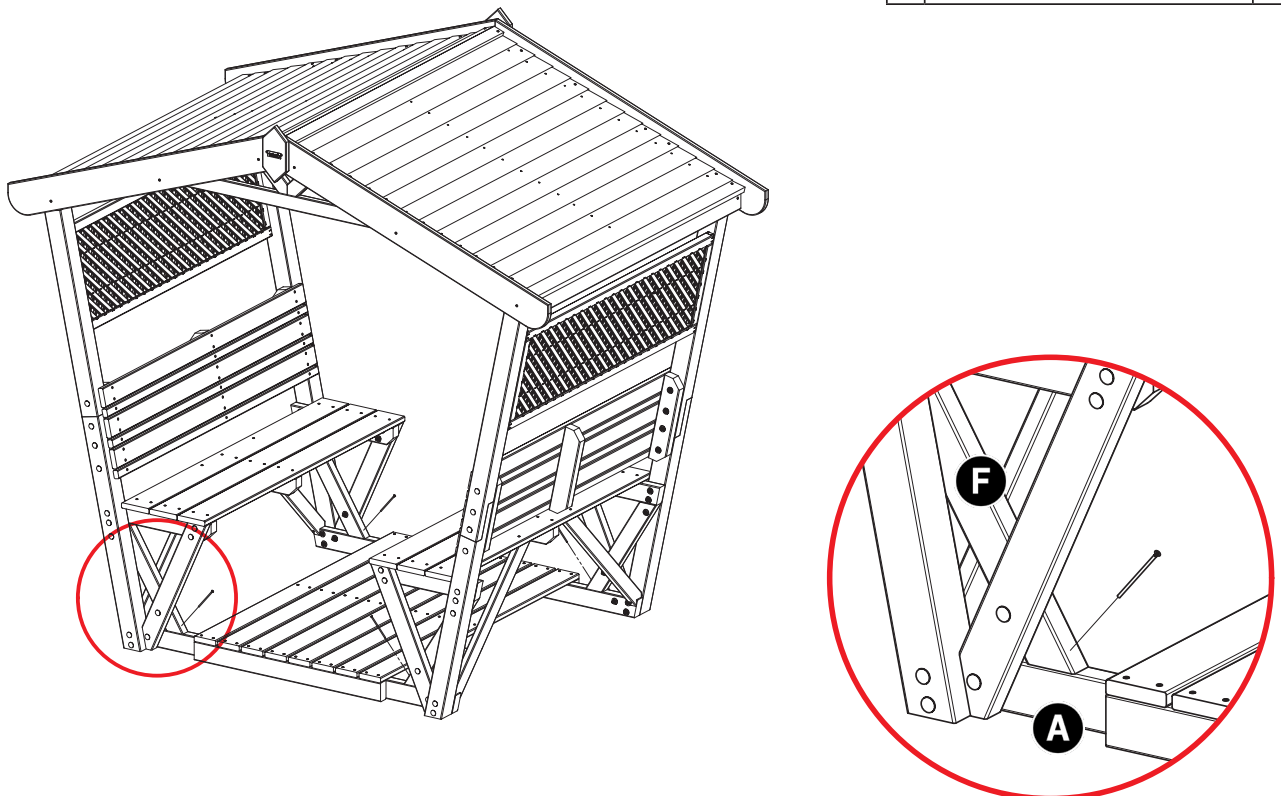


Secure Seat Brace (F) to Post Brace (A).

22

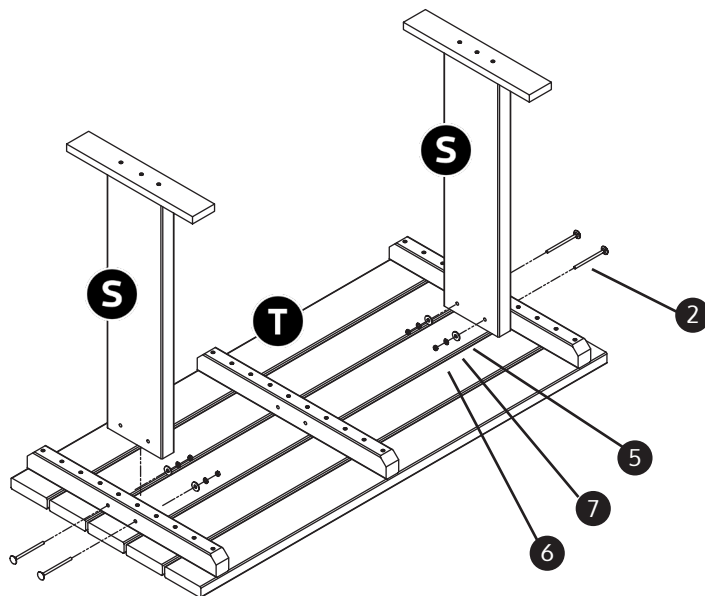


2	M8 x 100mm Bolt		x4
5	M8 Washer		x4
7	Spring Washer		x4
6	Nut		x4


23

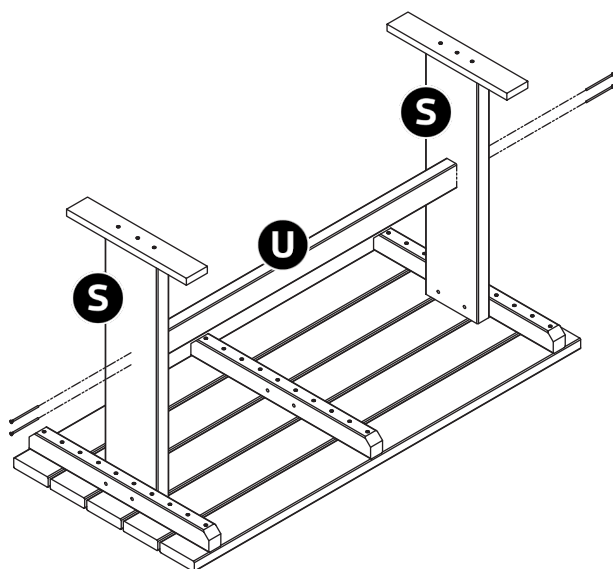



8	90mm Screw		x4
---	------------	---	----

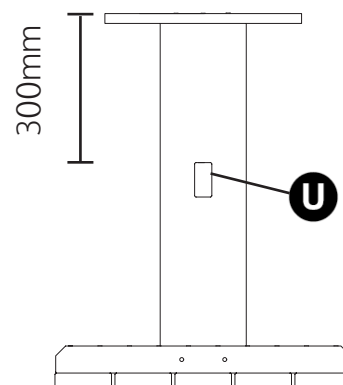

24

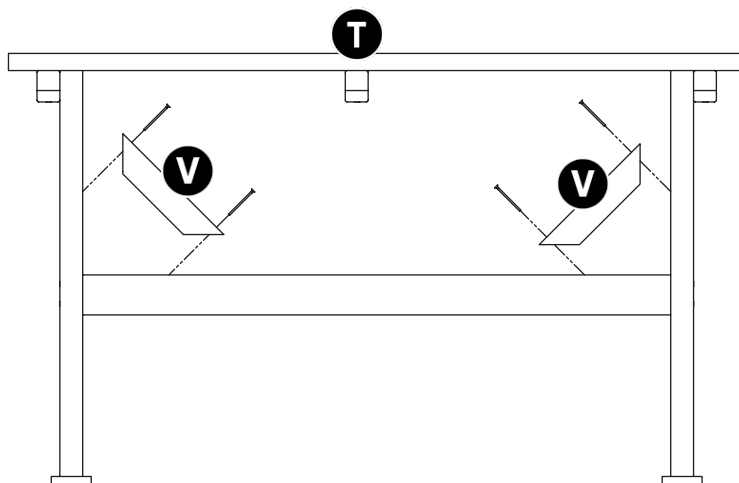

9	60mm Screw		x4
---	------------	---	----

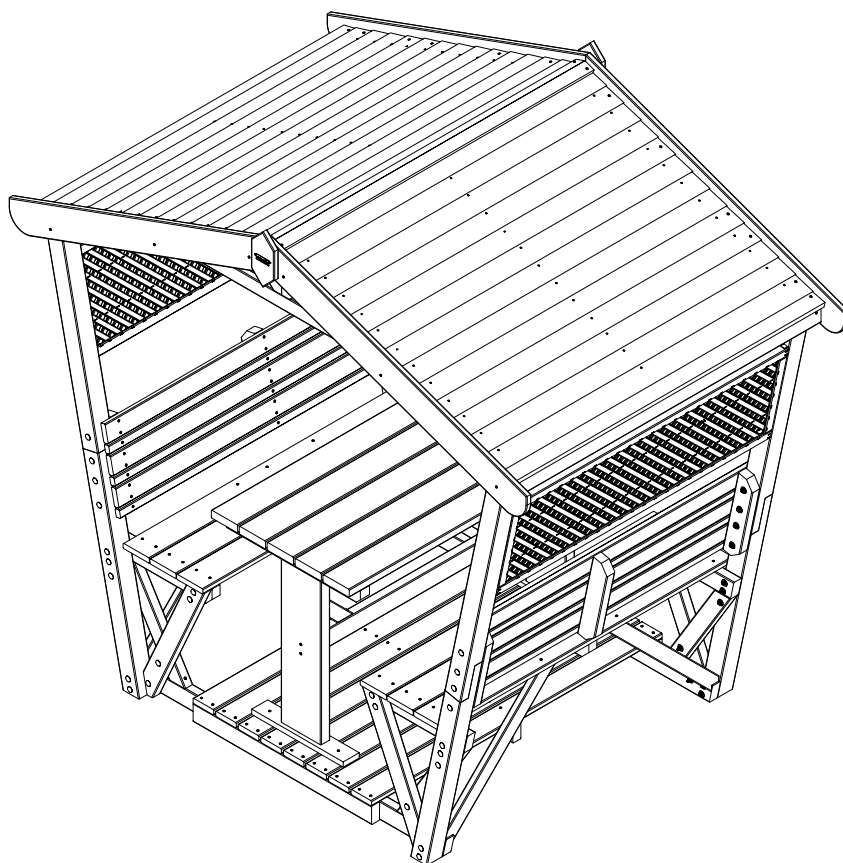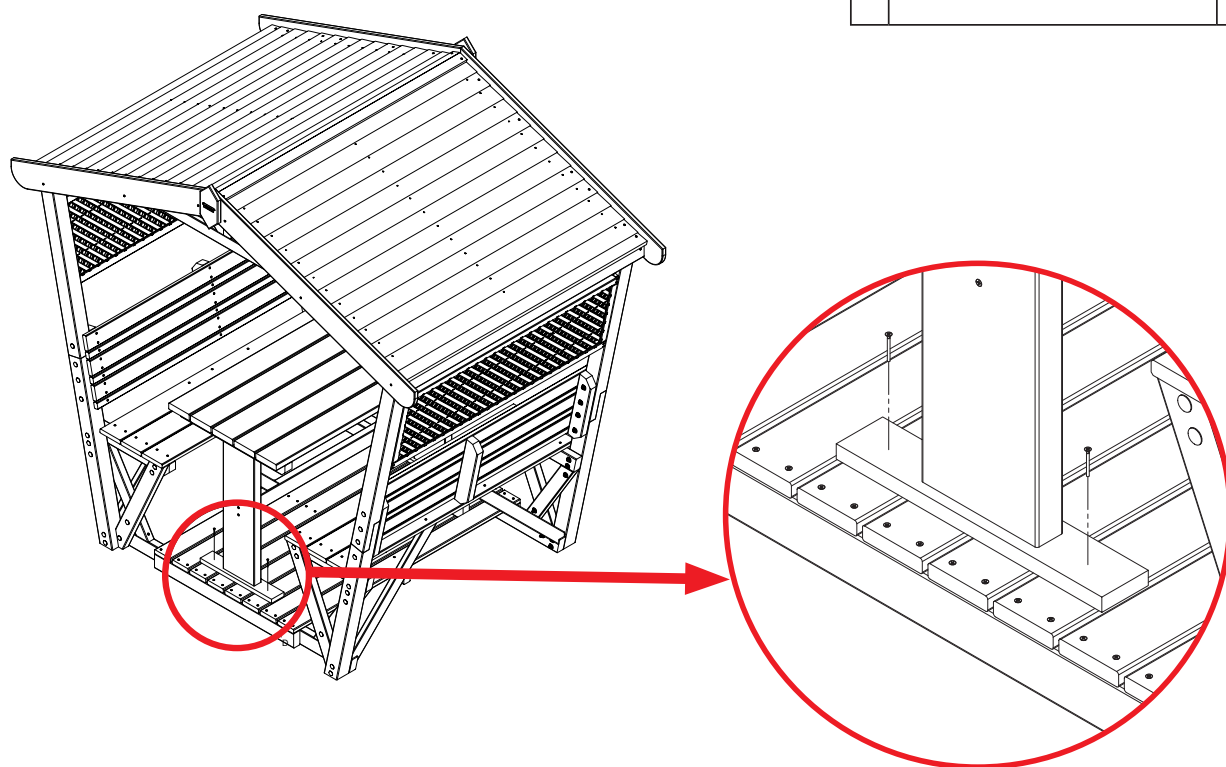

NOTE: Periodically check and tighten nuts to maintain stability

Your Stirling Arbour is now complete.